
Panasonic

Operating Instructions 取扱説明書



Portable Hard Disk Unit ポータブルハードディスクユニット

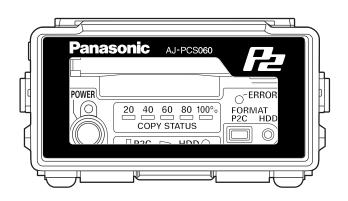

DEUTSCH Fur Erlauterungen in Deutsch, konsultieren Sie bitte die mitgelieferte CD-ROM.

FRANÇAIS Pour des explications en français, veuillez vous reporter au CD-ROM fourni.

ITALIANO Per le istruzioni in italiano, vedere il CD-ROM in dotazione.

ESPAÑOL Para la explicación en español, consulte el CD-ROM suministrado.

Before operating this product, please read the instructions carefully and save this manual for future use.

このたびは、パナソニック製品をお買い上げいただき、まことにありがとうございます。

- ●取扱説明書をよくお読みのうえ、正しく安全にお使いください。
- ●ご使用前に「安全上のご注意」(J-2~J-4ページ)を必ずお読みください。
- ●保証書は「お買い上げ日・販売店名」などの記入を確かめ、取扱説明書とともに大切に保管してください。

For U.S.A. and Canada

IMPORTANT

"Unauthorized recording of copyrighted television programmes, video tapes and other materials may infringe the rights of copyright holders and contravene copyright laws."

Operating precaution

Operation near any appliance which generates strong magnetic fields may give rise to noise in the video and audio signals. If this should be the case, deal with the situation by, for instance, moving the source of the magnetic fields away from the unit before operation.



CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

CAUTION:

Danger of explosion or fire if battery is mistreated.

- · Replace only with same or specified type.
- Do not disassemble or dispose of in fire.
- Do not store in temperatures over 60 °C.
- Use specified charger for rechargeable batteries.
- Do not recharge the battery if it is not a rechargeable type.
- Do not leave the battery in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

For memory back up battery

• Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

 Refer replacement back-up battery to qualified service personnel.

WARNING:

- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, KEEP THIS EQUIPMENT AWAY FROM ALL LIQUIDS. USE AND STORE ONLY IN LOCATIONS WHICH ARE NOT EXPOSED TO THE RISK OF DRIPPING OR SPLASHING LIQUIDS, AND DO NOT PLACE ANY LIQUID CONTAINERS ON TOP OF THE EQUIPMENT.

CAUTION:

In order to maintain adequate ventilation, do not install or place this unit in a bookcase, built-in cabinet or any other confined space. To prevent risk of electric shock or fire hazard due to overheating, ensure that curtains and any other materials do not obstruct the ventilation.

CAUTION:

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

indicates safety information.

A rechargeable battery that is recyclable powers the product you have purchased.

For U.S.A. - California Only

This product contains a CR Coin Cell Lithium Battery which contains Perchlorate Material-special handling may apply.

See www.dtsc.ca.gov/hazardouswaste/perchlorate

Read this first! (continued)

For U.S.A. and Canada

FCC NOTICE (USA)

Declaration of Conformity
Model Number: AJ-PCS060G
Trade Name: PANASONIC

Trade Name: PANASONIC
Responsible Party: Panasonic Corporation of North America

One Panasonic Way, Secaucus, NJ 07094
Support contact: Panasonic Broadcast & Television Systems Company

1-800-524-1448

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To assure continued compliance, follow the attached installation instructions and do not make any unauthorized modifications.

CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

The user may find the booklet "Something About Interference" available from FCC local regional offices helpful.

FCC Warning:

To assure continued FCC emission limit compliance, follow the attached installation instructions and the user must use only shielded interface cables when connecting to host computer or peripheral devices. Also any unauthorized changes or modifications to this equipment could void the user's authority to operate this device.

For U.S.A. and Canada IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer s instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Read this first! (continued)

For Europe

IMPORTANT

"Unauthorized recording of copyrighted television programmes, video tapes and other materials may infringe the rights of copyright holders and contravene copyright laws."

Operating precaution

Operation near any appliance which generates strong magnetic fields may give rise to noise in the video and audio signals. If this should be the case, deal with the situation by, for instance, moving the source of the magnetic fields away from the unit before operation.

WARNING:

- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, KEEP THIS EQUIPMENT AWAY FROM ALL LIQUIDS. USE AND STORE ONLY IN LOCATIONS WHICH ARE NOT EXPOSED TO THE RISK OF DRIPPING OR SPLASHING LIQUIDS, AND DO NOT PLACE ANY LIQUID CONTAINERS ON TOP OF THE EQUIPMENT.

CAUTION:

In order to maintain adequate ventilation, do not install or place this unit in a bookcase, built-in cabinet or any other confined space. To prevent risk of electric shock or fire hazard due to overheating, ensure that curtains and any other materials do not obstruct the ventilation.

CAUTION:

Danger of explosion or fire if battery is mistreated.

- Replace only with same or specified type.
- Do not disassemble or dispose of in fire.
- Do not store in temperatures over 60 °C.
- Use specified charger for rechargeable batteries.
- Do not recharge the battery if it is not a rechargeable type.
- Do not leave the battery in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

For memory back up battery

- Danger of explosion if battery is incorrectly replaced.
 Replace only with the same or equivalent type.
- Refer replacement back-up battery to qualified service personnel.

CAUTION:

TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

■ DO NOT REMOVE PANEL COVERS BY UNSCREWING THEM.

To reduce the risk of electric shock, do not remove the covers. No user serviceable parts inside. Refer servicing to qualified service personnel.

indicates safety information.

Read this first! (continued)



TO REMOVE THE BATTERY

Back-up Battery (Lithium Battery)

• For the removal of the battery for disposal at the end of its service life, please consult your dealer.

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.



Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.



Information on Disposal in other Countries outside the European Union

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Contents

Getting Started	
Read this first!	For better performance E-8 AJ-PCS060G E-8 Hard disk E-8 Cleaning E-9 Maintenance E-9 AC adapter E-9 Battery pack E-9
Using the AJ-PCS060G	
Control reference guide E-10 Front E-10 Top E-11 Right side E-11 Left side E-12 Back E-12 Copying E-13 Turning the unit ON and OFF E-13 Inserting P2 cards E-13 Ejecting P2 cards E-13	Write-protection on P2 cards · · · · · E-14 HDD capacity indicator · · · · · · E-14 Battery level indicator · · · · · · E-15 Copying from P2 cards to the HDD · · · E-16 Canceling copy operations · · · · E-18 Formatting · · · · · · · E-18 Formatting P2 cards · · · · · E-18 Formatting the HDD · · · · · · E-19 Auto power OFF during use · · · E-19
Connecting to a Computer	
Connecting to a computer · · · · · E-20 Overview of dedicated software · · · · E-22 Starting and closing P2Store Manager · · · · E-23 P2Store Manager screens · · · · · E-24	HDD page · · · · · E-24 S.M.A.R.T page · · · E-26 Setup page · · · E-27 Upgrade page · · · · E-28 Updating procedure · · E-29
Troubleshooting and Reference	
ERROR LED display E-30 Troubleshooting E-33	Specifications · · · · · · E-34
Microsoft and the Microsoft lage Windows are	aniatavad tuadamaulia au tuadamaulia at Miavaaatt

- Microsoft and the Microsoft logo, Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Apple, Macintosh, and the respective logos are registered trademarks or trademarks of Apple Computer, Inc. in the United States and other countries.
- Intel and Pentium are registered trademarks or trademarks of Intel Corporation in the United States and other countries.
- Other product names or corporate names in this manual are either trademarks or registered trademarks of their respective owners. In this manual, the trademark symbol ™ and registered symbol ® are omitted.

Overview

The AJ-PCS060G is a dedicated portable hard disk unit for AJ-P2C series P2 memory cards. It features a USB 2.0 (Type B) interface for data transfer with a computer. Data from P2 camera-recorders can easily be copied to the 60 GB internal hard disk.

Features

- Accepts one P2 card
- Internal 2.5 inch 60 GB hard disk
- Improved shock resistance from an acceleration sensor and protective materials around the hard disk ¹⁾
- · High-speed copying of P2 card data directly to the hard disk
- Fast data transfer to a computer via the USB 2.0 cable
 - 1) Shock Resistance
 - If a disk operation (such as copying) is in progress when the sensor detects that the unit is hit or dropped, the hard drive head is automatically parked to protect the disk and data.
 - The hard disk is also protected by impact-absorbing materials. However, no guarantee against damage or data loss is implied.

Included accessories

Install Manual	.1
• Ferrite core	.1
• CD-ROM	
[Includes P2 Driver, P2 Card Manager,	
Install Manual and Operating Instructions (this manual)]	.1

Options

Battery pack
 CGR-D16 (1600/1560 (typ./min.) mAh)

CGA-D54 (5400 mAh)

AC adapter AG-B25

For better performance

AJ-PCS060G

The unit's internal hard disk is protected by materials to withstand impact or drops better. However, please understand that no guarantee against damage or data loss is implied.

As optional accessories, use a recommended battery pack and AC adapter.

Hard disk

The unit houses a hard disk drive ("HDD").

Take the following precautions during setup and use to protect the HDD and data stored on it from data loss or interrupted operation.

- Do not subject the unit to vibration or impact during use. (Otherwise, the HDD may be damaged.)
- Do not use the unit where vibration occurs or put it on unstable surfaces.
- Do not use it in enclosed areas without air circulation, where operating heat cannot be dissipated.
- Do not subject it to extreme changes in temperature.
 - →Using the unit where the temperature changes suddenly poses a risk of condensation. Using the unit with internal condensation may damage the HDD. Ensure a fairly constant room temperature, where any temperature changes occur at less than 20 °C (68 °F) per hour.
- Do not use the unit in extremely humid places.
- Do not remove the battery pack or unplug the AC adapter when the power is on.
- Before transferring the unit elsewhere, always turn the unit OFF by holding the [POWER] button for at least 2 seconds and waiting for it to finish shutting down.

Wait until it has stopped moving completely (about 2 minutes), and protect it from vibration and impact in transit. (After turned OFF, the HDD will continue spinning from inertia for a while.)

• Do not use the unit at altitudes lower than -90 m (-300 feet or lower), or higher than 3,000 m (10,000 feet or higher) above sea level.

The HDD is a high-precision device. Operating conditions may pose a risk of partial damage, and in a worst-case scenario, there is a serious risk that data cannot be read or recorded. Thus, please do not consider the internal HDD a permanent storage place for data. Use it as a temporary storage device until you can back up data on other storage media.

■ Recorded data

If the HDD is damaged, data recorded on it will be lost. Always keep an extra copy of important data on separate storage media. See page E-22 for instructions on backing up data.

Note that Panasonic cannot be liable for data lost from HDD failure or other problems, or for other direct or indirect loss.

■ Erasure of HDD data before disposal or transference of the unit

When you dispose of the unit or transfer it, we urge you to take responsibility for erasing any important data on the HDD. This will avoid any problems from leaked information.

Dispose of the HDD after bringing it near a strong magnetic field and breaking it with a hammer or other means to make it unreadable.

For better performance (continued)

Cleaning

Never clean the unit with solvents such as benzene, thinner, or alcohol

- Before cleaning, remove the battery pack or unplug the AC adapter.
- Cleaning the unit with solvents may damage the outer case or cause the paint to peel.
- Use a clean, soft dry cloth to wipe away dust or dirt. If the unit becomes quite dirty, wipe it with a cloth dampened in diluted neutral detergent after wringing the cloth well. Use a dry cloth to wipe it dry.
- If you use a chemically treated dust cloth, follow the precautions for use.

Maintenance

The unit's internal hard disk drive (HDD) is a high-performance part that is subject to maintenance.

To keep the unit in optimal condition, we recommend that you inspect it regularly and bring it to the place of purchase for periodic maintenance.

Ask your dealer for further details about periodic maintenance.

Request periodic maintenance under this guideline. See page E-25 for instructions on checking the operating time.

Every 2,000 hours of use

Tips:

- In some cases, the content of the HDD is cleared during maintenance, so any data will be lost. Before maintenance, always back up needed data on separate storage media. Please understand that you will not be compensated for lost data.
- You will not be compensated for data stored on the HDD in the case of HDD failure. Lost data cannot be recovered.

The HDD is for temporary storage of data, and we recommend backing up needed data promptly.

AC adapter


<u>Use the optional AC adapter (AG-B25).</u>

Read the user's manuals of all accessories carefully before use.

Note:

When using an AC adapter, attach the included ferrite core near the base of the battery-type connector on the DC cable connected to the unit. Be sure to wind the cable around the ferrite core twice, as shown, at time of attachment.

If you do not use the ferrite core, other devices may be affected by the unit.

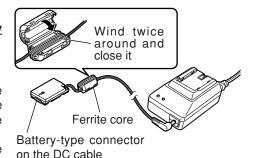


Battery pack

Use the optional Battery pack.

Read the user's manuals of all accessories carefully before use.

Control reference guide

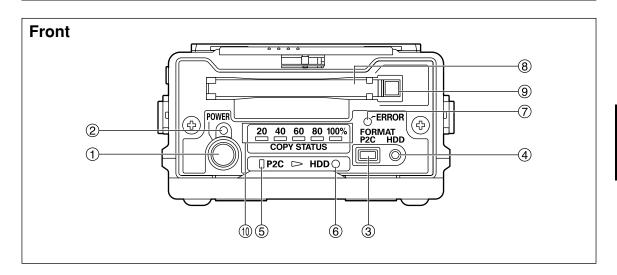

1 POWER button

Use this button to turn the unit ON and OFF. When the unit is OFF, simply press the [POWER] button to turn it ON. When ON, hold the [POWER] button for <u>at least two seconds</u> to turn it OFF.

2 POWER LED

Lights when the unit is ON.

The POWER LED flashes during startup or shutdown.

3 P2C button

Press to format P2 cards. After copying data to the HDD, you can format the P2 card as needed. (See page E-18)

Note:

Data cannot be recovered after formatting. Before formatting cards, make sure all the data may safely be deleted.

4 HDD button

Press to format the internal HDD. All unneeded data on the HDD can be deleted at once. (See page E-19)

Note:

Data cannot be recovered after formatting. Before formatting the HDD, make sure all the data may safely be deleted.

⑤ P2C LED

Lights or flashes when the unit is accessing a P2 card.

(See pages E-16, E-18 and E-29)

6 HDD LED

Lights or flashes when the unit is accessing the internal HDD.

(See pages E-16, E-19 and E-29)

7 ERROR LED

Lights or flashes if errors occur.

Errors are identified by the combination of [COPY STATUS] LEDs on the front and [E1 to E4], [P2C], and [HDD] LEDs on the top.

(See pages E-15 and E-30 to E-32)

® P2 card slot

A dedicated slot for P2 cards. Before inserting a P2 card, make sure the EJECT button (9) is in. Hold the card level as you insert it.


Never insert anything in the slot except P2 cards.

Press to eject P2 cards from the slot. (See page E-13)

(11) COPY STATUS LEDs

Indicates the progress of copying or formatting. (See pages E-16, E-18, E-19, E-29 and E-32)

Control reference guide (continued)

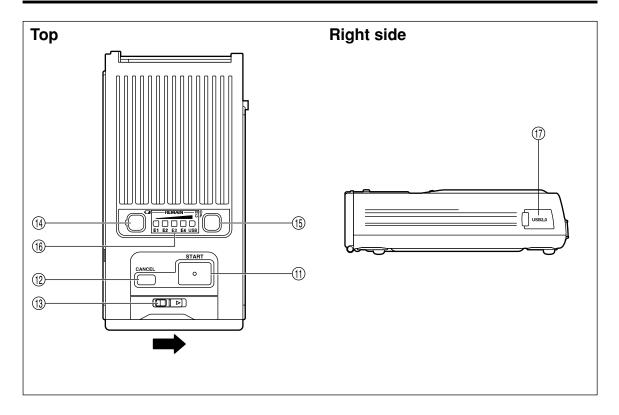

(1) START button

Press to start copying or formatting. Hold the [START] button for <u>at least 2 seconds</u> to start either process.

(12) CANCEL button

Press to cancel copying.

During copying, hold the [CANCEL] button for <u>at</u>
<u>least 2 seconds</u> to cancel copying.

(13) Sliding knob

To open the front panel cover, slide the knob in the direction of the arrow.

Battery level indicator button [□]

After this button is pressed, the remaining power level of the battery pack will be displayed for about 2 seconds in (§), the [REMAIN] indicator. (See page E-15)

The [USB] indicator remains lit (green) as long as a USB 2.0 cable is connected.

(§) HDD capacity indicator button [HDD CAP]

After this button is pressed, the available HDD capacity will be displayed for about 2 seconds in (f), the [REMAIN] indicator.

The number in [REMAIN] represents how many cards can be copied to the HDD.

(See page E-14)

The [USB] indicator remains lit (green) as long as a USB 2.0 cable is connected.

(6) Battery/HDD indicator and error LEDs [REMAIN]

Indicates the remaining battery level, available HDD capacity, and, if errors occur, error identification.

(See pages E-14, E-15, E-30 to E-32)


① USB 2.0 connector (Type B)

Attach the USB 2.0 cable to this connector when connecting the unit to a computer or P2 device that can serve as a USB host.

Note:

Computers used with the unit must support USB 2.0.

Control reference guide (continued)

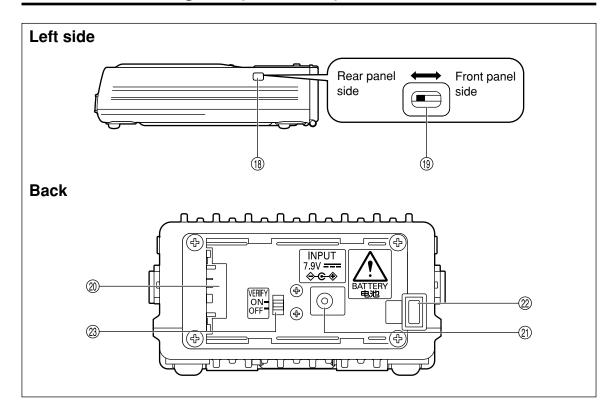

Sliding switch cover

(9) Sliding switch

Slide toward the front to enable software updates.

Normally, keep the switch toward the back. (See page E-29)

② Power inlet

Insert an optional battery pack or AC adapter here.

② DC IN socket (7.9 V)

2 Battery lock release button

When removing optional battery packs or AC adapters, hold down the button as you slide it toward the button side.

3 VERIFY switch

Use this switch to verify data after it has been copied from P2 cards onto the internal HDD. (See page E-16)

ON: Verify

OFF: Do not verify

Note:

To ensure accurate copying, slide the VERIFY switch to ON. If it is set to OFF, the unit may not be able to copy correctly in some cases. However, note that copying will take twice as long with verification (when ON) than without (when OFF).

Copying

Turning the unit ON and OFF

Use an optional battery pack or AC adapter as the power source. (See page E-7)

In either case, make sure the power source is firmly connected to the unit.

For connection instructions, refer to the user's manual of the accessory. Turn the unit ON before all operations. When finished (and when the unit is not in use), turn the unit OFF.

Power ON

To turn the unit ON, press the [POWER] button. The POWER LED flashes during startup. When the unit is ready for use, it remains lit (green).

Note:

- When a low voltage error occurs (when [ERROR] LED lights in red and [E2] in [REMAIN] flashes in red), either replace the battery pack with a recharged one or switch to the AC adapter and restart the unit.
- When the temperature of the built-in HDD falls below the specified temperature (when [ERROR] LED lights in red, and [E1] lights and [E2] flashes in red in [REMAIN]), the unit warms up to the specified temperature. During warm-up, the [START] button and other controls are temporarily disabled.
- More power is consumed during warm-up. In some cases a low-voltage error may occur afterwards, depending on the remaining level of the battery pack. If this occurs, turn the power OFF and then ON again.

Power OFF

To turn the unit OFF, hold the [POWER] button for at least 2 seconds.

The POWER LED goes out. Note that during shutdown, this LED flashes.

Inserting P2 cards

When inserting a P2 card in the card slot, always hold the card level and insert it carefully.

Forcing cards in the slot at an angle may damage them or the unit.



Ejecting P2 cards

To eject a card, press the EJECT button once, and after the button comes out, press it again.

Do not eject P2 cards during access by the unit (when the [P2C] LED is lit). The data may be lost or the P2 card damaged.

Note:


If the unit is connected to a computer, wait until shutdown processing for the card is complete before pressing the EJECT button.

- · For Windows:
 - 1. Go to [Start] \rightarrow [My Computer]
 - 2. Right-click on the P2 card drive (displayed as a removable disk) and select "Eject"
- 3. Press the EJECT button and remove the P2 card
- · For Macintosh:

Select the P2 card volume displayed on the desktop. From the menu bar at the top of the screen, select $[File] \rightarrow [Eject]$, or otherwise drag the volume to the trash.

Write-protection on P2 cards

When P2 cards are inserted, the following operations will be prevented to protect the data, even if you adjust the write-protect switch. Thus, check the write-protect switch before inserting P2 cards.

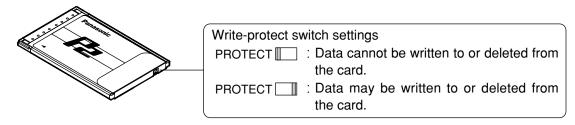

HDD capacity indicator

Up to 15 P2 cards worth of data can be copied to the unit's internal HDD. (However, in the case of 8 GB P2 cards, the data on only 7 P2 cards can be copied.) To see how much space is available on the HDD (how many cards can be copied), press the [HDD CAP] button and check the [REMAIN] indicator.

See [HDD Capacity (in Number of Cards)].

With the unit ON, check how many P2 cards can be copied

Press the [HDD CAP] button the number of times indicated (Press count) in [HDD Capacity (Settings)] below. This will depend on the type of P2 card inserted.

The [REMAIN] LED will light in orange for a second and then the display will change to that shown in [HDD Capacity (in Number of Cards)] below.

【HDD Capacity (Settings)】

■ : LED lit OR : orange

	Press	REMAIN					
P2 card type	count	□ E1	□ E2	□ E3	□ E4	USB	
2 GB/4 GB	1	■ OR					
8 GB	2	■ OR	■ OR				
16 GB	3	■ OR	■ OR	■ OR			

[HDD Capacity (in Number of Cards)]

■ : LED lit ■ : LED flashing R : red G : green

Capacity			REMAIN		
(No. of cards that can be copied)	☐ E1	E2	□ E3	□ E4	□ USB
0	■R	■R	■R	■R	■R
1	■G				
2	■G	■G			
3	■G	■G	■G		
4	■G	■G	■G	■G	
5 or more	■G	■G	■G	■G	■G
Full useable (when the cards are not in use)	■G	■G	■G	■G	■G

The [REMAIN] indicator goes out after about 2 seconds.

Battery level indicator

When using an optional battery pack, you can check the remaining level. You can see how much power is left by pressing the [

[Battery level]. below.

Copy operations are not possible in the following states.

- Low power error (The [ERROR] LED lights in red and the [E2] in [REMAIN] flashes in red.)
- Low battery pack charge error (detected when copying P2 cards of capacity 16 GB or higher) (The [ERROR] LED lights in red and the [E2] in [REMAIN] lights in red.)

Once the level reaches 0 (zero), an error is displayed as described in [Battery level] and the unit goes OFF immediately. Switch to another optional battery pack that is fully charged or use an optional AC adapter.

With the unit ON, press the [□] button

The display will correspond to [Battery level], below.

[Battery level]

 \blacksquare : LED lit \blacksquare , \blacksquare : LED flashing R : red G : green

Battery pack			REMAIN			
level	□ E1	□ E2	□ E3	□ E4	USB	OERROR
100	■G	■G	■G	■G	■G	
	■G	■G	■G	■G		
	■G	■G	■G			
	■G	■G				
	■G					
	■R					
0	■R	■R	■R	■R	■R	₽R

The [REMAIN] indicator goes out after about 2 seconds.

Note:

With an AC adapter, in some cases the LED display may not indicate 100. This is not a problem.

Copying from P2 cards to the HDD

High-speed copying from P2 cards to the HDD is possible because data is transferred directly to the HDD.

Do not turn the unit OFF or eject P2 cards when the [P2C] or [HDD] LEDs are lit.

When using an optional battery pack, check the remaining level before copying data.

Copy operations are not possible in the following states.

- Low power error (The [ERROR] LED lights in red and the [E2] in [REMAIN] flashes in red.)
- Low battery pack charge error (detected when copying P2 cards of capacity 16 GB or higher)
 (The [ERROR] LED lights in red and the [E2] in [REMAIN] lights in red.)

Replace with a fully charged, optional battery pack or switch to the use of an optional AC adaptor.

1. With the unit ON, insert a P2 card in the slot

2. Press the [HDD CAP] button and make sure there is enough space to copy at least one card

If the capacity (in number of cards) is 0, copy needed data to other storage media and format the HDD. (See page E-14 and E-19)

3. Hold the [START] button for at least 2 seconds

Copying begins, and the verification ¹⁾ is conducted (when the [VERIFY] switch is set to ON). The copying progress is indicated by the LEDs, as follows.

= : LED lit = □, □, • : LED flashing G: green OR: orange

		C					
Progress (%)	20	40	60	80	100%	□P2C	HDDO
00-19	≖ G						
20-39	— G	≖ G				During	During
40-59	— G	— G	≖ G			access	access
60-79	— G	— G	— G	- G		∎or	● OR
80-99	— G	— G	— G	— G	- □G		
100	— G						

4. Make sure all the [COPY STATUS] LEDs are lit in green

5. Press the [POWER] button

Copying is complete and the [COPY STATUS] LEDs go out.

Note:

Once the data on a P2 card has been copied to the HDD, it cannot be copied to the HDD again. If this is
the case, one of the following operations will be performed depending on the [VERIFY] switch setting.

[VERIFY] switch is OFF: Even when step 3 is taken, 100% is immediately displayed as the copying progress status.

[VERIFY] switch is ON: When step 3 has been taken, the data is not copied, 40-59% is displayed as the copying progress status, and the verification is conducted.

• Even after data on a P2 card has been edited, added or deleted by a computer or other device, it may be recognized as the same data. If this is the case, one of the following operations will be performed depending on the [VERIFY] switch setting.

[VERIFY] switch is OFF: Even when step 3 is taken, 100% is immediately displayed as the copying progress status.

[VERIFY] switch is ON: When step 3 has been taken, the data is not copied, 40-59% is displayed as the copying progress status, the verification is conducted, the data is recognized as different, and operation ends with the Verify NG error ²). (See page E-32)

(Continued on next page)

- If the unit heats up during copying, it will automatically copy at a slower rate. The [P2C] and [HDD] LEDs also flash slowly at this time.
- If copying is not completed normally (if the unit is turned OFF or the P2 card is pulled out during copying), the HDD capacity (number of cards that can be copied) is decreased by as many P2 cards that could not be copied.
- All [COPY STATUS] LEDs flash in green if a blank P2 card is inserted and step 3 above is finished.
- In the case of P2 cards that include a Bad clip³, be sure to first restore any lost data using a P2 camerarecorder or other device before copying using this unit. When a defective clip is copied without correcting its defects, it may not be possible to repair the copied defective clip.
- 1) This function conducts the verify whether the data on P2 cards and the data recorded on the internal HDD are the same.
- 2) When the Verify NG error has occurred, "ERROR" appears in the status column of the HDD partition information section (see page E-24). If this is the case, the data on the P2 card concerned can be copied again, but the partition with the "ERROR" status will remain unchanged.
- 3) Improperly recorded clip due to accidental removal of the P2 card or sudden power loss during recording. Clips with a yellow 🗵 marker displayed on the thumbnail screen when using a P2 camera-recorder or similar device.

Canceling copy operations

You can cancel copying in progress as follows.

1. Hold the [CANCEL] button for at least 2 seconds

The [COPY STATUS], [P2C], and [HDD] LEDs change as follows.

= : LED lit OR : orange

	CC					
20	40	60	80	100%	□P2C	HDD (
O R	O R	O R	— OR	O R	_	_

2. Press the [POWER] button

Copying is canceled and the [COPY STATUS] LEDs go out.

Note:

Canceling copy automatically deletes copied data.

Formatting

Formatting P2 cards

You can delete all data on P2 cards.

Data cannot be recovered after formatting. Before formatting cards, make sure all the data may safely be deleted.

Do not turn the unit OFF or eject P2 cards when the [P2C] LED is flashing.

This may damage the P2 card.

P2 cards cannot be formatted if the write-protect switch is set to PROTECT. Additionally, when P2 cards are inserted in the slot, you cannot adjust the write-protect switch to prepare them for formatting.

1. With the unit ON, insert a P2 card in the slot

2. Hold the [P2C] button for at least 2 seconds

The [COPY STATUS], [P2C], and [HDD] LEDs change as follows.

■ : LED lit = : LED flashing OR : orange

	CC					
20	40	_60	80	100%	□P2C	HDDO
■ OR	∎or	_				

3. Within 2 seconds, press the [START] button

The [COPY STATUS], [P2C], and [HDD] LEDs go out, and P2 card formatting begins. Formatting is complete when the [P2C] LED flashes in orange.

Note:

While the [COPY STATUS], [P2C], and [HDD] LEDs are on in step 2, if you do not press the [START] button <u>within 2 seconds</u> (step 3), the P2 card will not be formatted. To format the card, repeat the process from step 2.

Formatting (continued)

Formatting the HDD

You can delete all data copied onto the internal HDD.

Put the unit on a solid surface before formatting the HDD.

Vibration or impact may damage the unit during formatting.

Data cannot be recovered after formatting. Before formatting the HDD, make sure all the data may safely be deleted.

Do not turn the unit OFF when the [HDD] LED is lit.

1. With the unit ON, hold the [HDD] button for at least 2 seconds

The [COPY STATUS] LED, [P2C] LED, and [HDD] LED change as follows.

• : LED lit = : LED flashing OR : orange

	CC				
20	40	_60	100%	□P2C	HDDO
■ OR	■ OR	■ OR	_	● OR	

2. Within 2 seconds, press the [START] button

The [COPY STATUS], [P2C], and [HDD] LEDs go out, and HDD formatting begins. Formatting is complete when the [HDD] LED flashes in orange.

Note:

- While the [COPY STATUS], [P2C], and [HDD] LEDs are on in step 1, if you do not press the [START] button within 2 seconds (step 2), the internal HDD will not be formatted.

 To format the HDD, repeat the process from step 1.
- 15 partitions are created automatically on the internal HDD.

Auto power OFF during use

- If left unused, the unit will automatically turn OFF after ten minutes if no copying or formatting operations are in progress. To use the unit, turn it ON again.
- If the unit is left unused while connected to a computer via the USB 2.0 cable, auto power OFF is deactivated, even if no copying or formatting is in progress. To turn the unit OFF, hold the [POWER] button for at least 2 seconds.
- Note that auto power OFF is disabled while waiting for an error check after an error has occurred or when copying has ended.

Note:

You can set the time until auto power OFF on the P2Store Manager Setup page, in "Auto power off mode."

Options: [Never], [5 min], [10 min], [15 min], [20 min], [25 min], and [30 min]. Default: [10 min]. (See page E-27)

Connecting to a computer

Connect the unit to a computer with the USB 2.0 cable to back up data from P2 cards and the internal HDD on the computer.

■ System requirements

Your computer must meet these requirements for the P2 driver, the dedicated driver for this unit, and the dedicated software.

Operating system: Windows Vista Business or higher

Windows XP Professional SP2 or later

Windows 2000 SP4 or later Macintosh OS X (10.4)

Interface: Equipped with a USB 2.0 port

Note:

• When using the dedicated application software for this unit under Windows Vista, be sure log in as a user with administrator privileges and then execute. At startup, a "User Account Control" screen may appear. If this screen appears, click "Allow" to continue.

Installation

· For Windows:

Install the P2 driver on your computer from the included CD-ROM.

The dedicated software is installed at the same time.

For installation instructions, refer to the provided installation manual.

Note:

The P2 driver is software enabling high-speed access of the P2 card via a USB 2.0 cable.

· For Macintosh:

Follow these steps to install the dedicated driver and software applications.

- 1. Insert the included CD-ROM in your computer
- 2. Double-click the Macintosh folder in the CD-ROM
- 3. Double-click the AJ-PCS060G folder, and copy the folder appropriate for the computer on which the software will be installed, as indicated below, to a location such as the desktop using drag and drop.

PowerPC-based Mac OS X computer: PPC Intel-based Mac OS X computer: INTEL

- 4. Double-click the "P2StoreDriver.dmg" disk image module in the folder copied in step 3.
- 5. Double-click "P2StoreDriver.pkg"

The installation screen will now appear. Follow the instructions on the screen to complete the installation.

Continue with the following steps only when installing the software on an Intel-based Mac OS X computer.

- 6. Click on the "a" mark in the upper left-hand corner of the screen and select "System Preferences" to start it up.
- 7. Click the "Accounts" icon under "System".
- 8. Click "Login Items" on the "Accounts" screen.
- 9. Drag and drop the P2StoreManager icon from the folder copied in step 3 to the "Login Items" screen.
- 10. Click the "Hide" checkbox to place a checkmark in it.
- 11. Log out and log back in. P2Store Manager will start up automatically and appear in the "Dock".

■ Uninstallation

• For Windows:

For uninstallation instructions, refer to the provided installation manual.

· For Macintosh:

To uninstall the P2 driver and dedicated software, drag the AJ-PCS060G folder from where it is installed on the computer directly to the trash and empty the trash.

Also, on an Intel-based Mac OS X computer, delete the login items registered during installation.

Connecting to a computer (continued)

Connection

1. Start the computer

2. Use the USB 2.0 cable to connect the unit to the computer

3. Turn the unit ON by pressing the [POWER] button

On the unit, the POWER LED lights in green. The connection is automatically detected.

Note:

- Use a commercially available USB 2.0 cable. Use a cable shorter than 3 m (9.8 feet). The connection will not work correctly if the cable is longer than 3 m (9.8 feet).
- Do not connect more than one unit to the computer at once.
- Data cannot be written to the unit from a computer.
- Do not eject the P2 card or unplug the USB 2.0 cable during access of the P2 card or internal HDD. This may cause problems on the computer.
- Before ejecting P2 cards while the unit is connected to a computer, refer to the notes in "Ejecting P2 cards" on page E-13.

For Windows:

- When you connect the unit to a computer with the USB 2.0 cable, up to 16 partitions are added to the computer (15 partitions for the internal HDD and 1 partition for the P2 card). (This applies when mounting on drive letters.)
- In some cases, these partitions may be the same as for existing drives on the network. When partitions cannot be seen due to duplication with existing drives, use the P2Store Manager to mount these partitions on folders. Refer to ⑤ Drive mount setting button of page E-25.
- Partitions not used in the operation described in "Copying from P2 cards to the HDD" on page E-16 cannot be accessed from the computer. Refer to the HDD page (described on page E-24) to confirm which drive letters or specified folders have been assigned.

For Macintosh:

- Each partition is displayed as a folder on the desktop.
- If the number of copied partitions does not match the number of folders on the desktop, a connection error has occurred. Either remount the partitions from Disk Utility or restart the computer, and check again.

■ Removal

1. Disconnect the USB connection as follows

• For Windows Vista Business or Windows XP Professional:

Double-click on the "Safely Remove Hardware" icon in the task tray. Follow the instructions on screen to stop the "Panasonic P2 series USB Devices."

• For Windows 2000:

Double-click on the "Unplug or Eject Hardware" icon in the task tray. Follow the instructions on screen to stop the "Panasonic P2 series USB Devices."

• For Macintosh:

Select all folders displayed when the unit is connected. From the menu bar at the top of the screen, select [File] \rightarrow [Eject], or otherwise drag them to the trash.

2. Turn the unit OFF by holding the [POWER] button for at least 2 seconds

The POWER LED goes out.

3. Unplug the USB 2.0 cable

Connecting to a computer (continued)

■ Backing up data

To protect valuable data stored on the internal HDD, we recommend making a backup copy on your computer or another storage device.

Always check the free space on your computer's hard disk before backing up data.

For Windows:

• Using Windows Explorer:

Select top-level folders and files of each partition on the unit and copy them to your preferred folders on the computer. Execute the same procedure on all partitions of the unit.

• Using the "P2 Viewer":

Select needed clips and copy them to your preferred target folder on the computer, where you have set up the virtual drive. See the software manual for further instructions.

For Macintosh:

Using Finder:

Double-click folders displayed on the desktop (which represent each of the partitions on the unit) to open them. Select top-level folders and files and copy them to your preferred folders on the computer. Copy all the contents of other partitions on the unit the same way.

Overview of dedicated software

Using the dedicated software applications, you can display the status of the AJ-PCS060G, operate it, and perform routine inspection of the internal HDD.

■ Features

1. P2Store Manager

HDD status display

You can check the unit's HDD partition information, self-diagnostic information, and more.

AJ-PCS060G setup

You can customize operating parameters for the unit, including enabling or disabling auto power OFF.

AJ-PCS060G software updates

You can download software from the Panasonic website to keep the unit up to date.

2. HDD Maintenance

Routine inspection of the internal HDD

The software gives you full access to the internal HDD of the AJ-PCS060G, enabling you to check the status of the unit.

Refer to "Recommended daily checks and regular maintenance" (included).

Starting and closing P2Store Manager

1. Use the USB 2.0 cable to connect the unit to the computer

2. Turn the unit ON by pressing the [POWER] button

On the unit, the POWER LED lights in green, and the connection is automatically detected.

3. Start P2Store Manager

For Windows Vista Business or Windows XP Professional:

Go to [Start] \rightarrow [All Programs] \rightarrow [Panasonic P2] \rightarrow [P2 Store Manager].

Windows 2000:

Go to [Start] \rightarrow [Programs] \rightarrow [Panasonic P2] \rightarrow [P2 Store Manager].

For Macintosh:

Double-click the icon for this application in the AJ-PCS060G folder.

4. Make sure the indicator in the lower-left corner of the P2Store Manager screen displays "State: Connecting."

You can now display the unit's status and manage it. (See page E-24)

5. Exit P2Store Manager

For Windows:

Click the Close box (button) in the upper-right corner.


For Macintosh:

In the menu bar at the top of the screen, click [P2StoreManager] \rightarrow [Quit P2StoreManager]. If the unit was reconnected in this state, restart P2Store Manager.

(Applies only to Intel-based Mac OS X computers.)

P2Store Manager screens

Overview of screens

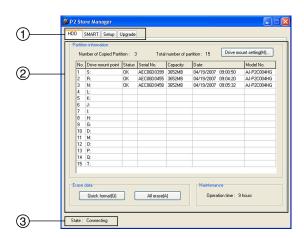

① Page tabs

Click the tabs to access different pages.

② Page display area

Displays sections with various information about the unit and buttons for operations.


③ State display area

Displays "State: Connecting" when the unit is connected to the computer, otherwise, "State: Disconnected."

HDD page

This page allows confirmation of the partition information of the internal HDD of the unit and the setting of the format and mounting method.

(The mounting method setting is a function only for Windows.)

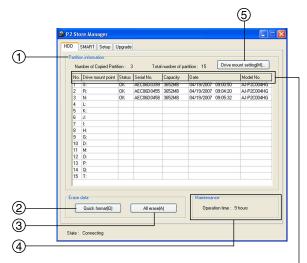

1 Partition information section

Displays partition information for data copied from P2 cards.



a No.

Displays the partition number.

6 Drive mount point

Displays the assigned drive letter or specified folder name.

If the drive letter or folder name is not displayed properly, either disconnect and then re-connect the USB cable or restart the computer, and check again.

Status

Displays the partition status.

"OK": Normal

"ERROR": Trouble occurred at some point during the copying or verification process.

Serial No.

Displays the source P2 card serial number.

Capacity

Displays the source P2 card capacity (in MB).

Date

Displays the date of copying.

Model No. (Ignore for PowerPC-based Mac OS X computers.)

Displays the model number of the P2 card being copied.

② Quick format button

For quick formatting of the internal HDD, do the following.

- Click the [Quick format] button
 A confirmation dialog is displayed, prompting you for approval for formatting.
- 2. Click [Yes] to execute quick formatting 1), 2)

(Continued on next page)

3 All erase button

For writing zeros to all sectors of the internal HDD

If you are using a battery to power the unit, switch to an AC adapter before this procedure.

1. Click the [All erase] button

A confirmation dialog is displayed, prompting you for approval for erasing, after which another dialog confirms the AC adapter connection.

2. Click [Yes]
Zeros are written to all sectors. 1)-3)

(4) Maintenance section

Displays the total time that the internal HDD has been in use.

(5) Drive mount setting button

(only for Windows)

You can select mounting on a drive letter or specified folder.

When the [Drive mount setting] button is clicked, the following screen is displayed.



When mounting on a drive letter:

- 1. Select [Mount on drive letter].
- 2. Click the [OK] button.
- 3. Restart the unit according to the instructions on the screen.

• When mounting on a specified folder 4)-12):

- Select [Mount on NTFS folder].
 When modifying the drive mount point folder, click the [Browse] button and specify the mount point.
- 2. Click the [OK] button.
- 3. Restart the unit according to the instructions on the screen.

Note:


- If you format the HDD using Macintosh software, always confirm that all data has been erased after formatting by unplugging and plugging in the USB 2.0 cable and checking.
- 2) Before using [Quick format] and [All erase], put the unit on a stable surface.
 - Vibration or impact may damage the unit during formatting.
 - Using [Quick format] or [All erase] will delete all data on the internal HDD.
 - If data you need is stored on it, back up the data to separate storage media before formatting.

- It takes about 45 minutes to write zeros to all sectors. Always do this with an AC adapter connected.
- 4) When [Mount on NTFS folder] is selected, each partition of the internal HDD of the unit is sequentially mounted on the subfolders "pa01" through "pa15." If the subfolders "pa01" through "pa15" don't exist under the specified folder, these subfolders are automatically created.
- 5) The specified NTFS folder cannot be mounted for the following cases.
 - When the subfolders "pa01" through "pa15" are not empty.
 - When the file system is not NTFS.
- 6) After executing [Mount on NTFS folder], the partitions of the internal HDD of the unit are sometimes not sequentially mounted on the subfolders "pa01" through "pa15" when the internal HDD of the unit is formatted or when a P2 card that is 8 GB or more is copied to the unit. When the unit and the computer are going to be connected, we recommend that you perform mounting.
- 7) If the number of the partitions is less than 15, when the internal HDD of the unit is formatted and reconnected after mounting is performed, a confirmation dialog is displayed. Follow the instructions on the screen.
- 8) When the input folder name does not exist, a confirmation dialog is displayed. Click [Yes] after confirming this input folder name.
- 9) If the subfolders "pa01" through "pa15" are accessed after mounting when the unit and the computer are not connected, a confirmation dialog may be displayed.
- 10) When disconnecting the unit from the computer after executing [Mount on NTFS folder], only one drive letter that was assigned on the P2 card is displayed.
- 11) The icon display for subfolders "pa01" through "pa15" may be different after executing [Mount on NTFS folder]. However, data accesses will be performed without problems.
- 12) When copying the data in subfolders "pa01" through "pa15" after executing [Mount on NTFS folder], perform a "copy" rather than a "move."

S.M.A.R.T page

Hard disks are relatively fragile devices. Before using the unit's HDD, check the S.M.A.R.T information. (S.M.A.R.T: Self-Monitoring, Analysis and Reporting Technology) If an error is displayed, contact the place of purchase.

Check self-diagnostic information for the unit's internal HDD on this page.

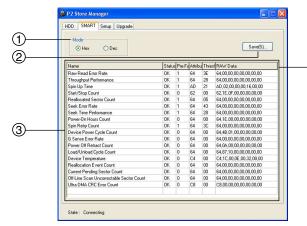

1 Mode section

Self-diagnostic information includes a list of numbers. Choose the format from these options.


For hexadecimal display: Choose [Hex] For decimal display: Choose [Dec]

② Save button

Self-diagnostic information can be saved as follows

- Click the [Save] button
 The [Save As] dialog is displayed.
- Enter a file name and click the [Save] button The self-diagnostic information is saved as a text file.

Self-diagnostic information section
 Displays self-diagnostic information as follows.



Identifies the displayed item.

Status

Gives diagnostic results.

OK: No errors NG: Errors

Pre-Failure / Advisory

Rates the severity of internal HDD errors as "1" or "0."

"1": Serious

"0": Not serious

If the diagnostic results **(5)** are "NG" for a serious error ("1" in [Pre-Failure / Advisory]), a critical error has occurred on the internal HDD. Contact the place of purchase as soon as possible.

Attribute

Displays a value representing the item status.

Threshold

Displays a reference value used in determining if the item is "OK" or "NG."


If the status value of is lower than the value in this section, an "NG" judgment is made.

A RAW Data

Displays status details for the item.

Setup page

For checking and changing the unit's operating parameters.

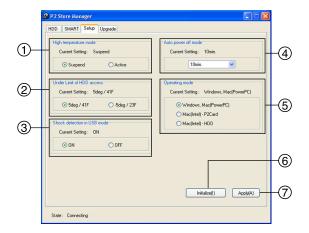

1 High temperature mode section

You can specify whether HDD operation is suspended or remains active if the internal HDD temperature exceeds a prescribed level.

Options: [Suspend] and [Active]. Default: [Suspend].

The unit's current setting is displayed in the "Current Setting" section.

If you change it, afterward click the [Apply] button ⑦.

Note:

Setting to [Active] may result in failure of the HDD.

Use this setting at your own risk.

② Under Limit of HDD access section

You can specify the minimum ambient temperature at which HDD operation is permitted.

Options: [5 deg / 41 F] and [-5 deg / 23 F]. Default: [5 deg / 41 F].

The unit's current setting is displayed in the "Current Setting" section. If you change it, afterward click the [Apply] button (7).

Note:

Setting to [-5 deg / 23 F] may result in failure of the HDD.

Use this setting at your own risk.

3 Shock detection in USB mode section

Use [ON] and [OFF] to enable or disable impact detection when the unit is connected to a computer via the USB 2.0 cable.

[ON] (default):

Data transfer with the computer is suspended if the unit is hit.

[OFF]:

Data transfer is maintained even if the unit is hit

The unit's current setting is displayed in the "Current Setting" section.

If you change it, afterward click the [Apply] button ⑦.

Note:

The possibility of HDD failure is higher with the [OFF] setting than with the [ON] setting. Use this setting at your own risk.

4 Auto power off mode section

You can specify the time until the unit switches OFF automatically if left unused (when no copying or formatting is in progress).

Options: [Never], [5 min], [10 min], [15 min], [20 min], [25 min], and [30 min].

Default: [10 min].

The unit's current setting is displayed in the "Current Setting" section.

(5) Operating mode section

Sets the type of computer to be connected to the unit.

[Windows, Mac(PowerPC)]

Set when the connected computer is a Windows computer or a Mac OS X computer. (Default. Normally, use in this setting.)

[Mac(Intel)-P2Card]

Set when the connected computer is an Intelbased Mac OS X computer.

This setting only allows the connected computer to access the unit's P2 card.

[Mac(Intel)-HDD]

Set when the connected computer is an Intelbased Mac OS X computer.

This setting only allows the connected computer to access the unit's internal HDD.

After selecting the operating mode, click the [Apply] button ⑦.

Note:

- On a PowerPC-based Mac OS X computer, this operating mode is not displayed.
- When connecting a Mac OS X computer to the unit, always be sure to check that the required dedicated driver is installed.
- If a P2 device that serves as a USB host is connected, and then the unit's operating mode is changed after use of that device, you will either need to restore the operating mode the next time you connect the same P2 device or connect the P2 device after restarting it.

⑥ Initialize button

You can restore the default settings in sections ①, ②, ③ and ④. However, note that the setup details are not applied automatically. If you change them, click the [Apply] button ⑦.

Apply button

You can save the setup details in sections 1,

- $\textcircled{2}\,,\,\textcircled{3}\,,\,\textcircled{4}\,$ and $\textcircled{5}\,$ on the unit as follows.
- 1. Click the [Apply] button

A confirmation dialog is displayed.

2. Click [Yes]

The setup details are saved on the unit.


3. Restart the unit.

Note:

The new setup takes effect after the unit is restarted.

Upgrade page

For keeping the unit's software updated.

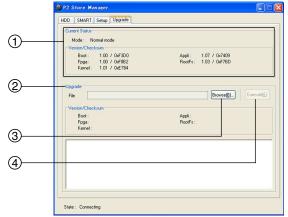

1) Current Status section

Displays the current mode (Normal mode or Software upgrade mode) and the version and checksum of the software used.

② Upgrade section

You can keep the unit up to date by downloading and installing the latest software for it.

③ Browse button

Click the [Browse] button to select the downloaded software for the unit.

The "Version/Checksum" section displays the version and checksum of the software after updating.

4 Execute button

For executing the command to update the software.

Note that it takes several minutes to complete this process.

Note:

During this process, never turn the unit OFF or unplug the USB 2.0 cable.

This may damage the unit.

Additionally, put the unit on a stable surface beforehand.

Updating procedure

 Follow the on-screen instructions on the support site given below to download the unit's software data and expand the file data to a folder of your choice.

For Japanese

http://panasonic.biz/sav/


For English

https://eww.pavc.panasonic.co.jp/pro-av/

2. Turn the unit OFF

In the State display area, "State: Disconnected" is displayed.

Remove the sliding switch cover on the side of the unit and slide the switch toward the front, as shown below.

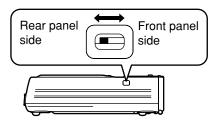

4. Turn the unit ON

In the State display area, "State: Connecting" is displayed.

5. In the "Current Status" section, make sure "Mode: Software upgrade mode" is displayed

If "Mode: Normal Mode" is displayed, reconfirm that the sliding switch is toward the front, as directed in step 3.

During updating, the LED display is as follows.

∴ : LED litG : GreenG : Orange

	COF					
20	40	60	∐P2C	HDDO		
— G	☐ OR	● OR				

6. Click the [Browse] button

The [Open] dialog is displayed.

7. Select the software data for the unit as downloaded in step 1

The "Version/Checksum" section displays the version and checksum of the software after updating.

If the information in both "Version/Checksum" sections matches, there is no need to update. Go to step 11.

8. Click the [Execute] button

A confirmation dialog is displayed.

9. Click the [Yes] button

The latest software will be installed, which takes several minutes.

During this process, never unplug the USB 2.0 cable or turn the unit or computer OFF.

10. After checking the update message, click the [OK] button.

The unit will be automatically deactivated. In Windows 2000, a warning is displayed regarding ejection, but there is no problem. Click the [OK] button.

- 11. On the side of the unit, set the sliding switch toward the back and attaching the sliding switch cover.
- 12. Turn the unit ON

In the State display area, "State: Connecting" is displayed.

- 13. Confirm that the "Current Status" section displays "Mode: Normal Mode"
- 14. Confirm that the information in both "Version/Checksum" sections matches If they do not, repeat this process from step 2.

Note:

Visit the following website for the latest news regarding operational verification of the AJ-PCS060G, including verified P2 cards.

For Japanese

http://panasonic.biz/sav/

For English

https://eww.pavc.panasonic.co.jp/pro-av/

ERROR LED display

Errors that may affect the unit are indicated as follows. Investigate the status and take these corrective actions.

ullet , \blacksquare , \blacksquare : LED lit ullet , llet , \blacksquare , \blacksquare : LED flashing R : red OR : orange

			REN	/AIN			
No.	ERROR	□ E1	□ E2	E3	□ E4	Status	Corrective Action
1	• R	■R					Turn the unit OFF and allow it to cool down before use.
						The internal HDD temperature is out of operating range.	The unit is warming up when [E2]
2	• R	■R	■R				flashes. Go to a warmer area.
3	● R		■R			The voltage is low when copying starts.	
4	• R		■R			The remaining charge of the battery pack is insufficient when copying starts.	Replace with a fully charged, optional battery pack or switch to the use of an optional AC adaptor.
5	● R	■R	■R	■R	∎R	The voltage is abnormally low.	
6	• R			■R	■R	At the start of copying, there is not enough HDD space.	After clearing the error display 1), format the internal HDD. If it contains data you need, back up the data on a different storage media before formatting.
7	• R		■R	■R		At the start of copying, a P2 card is not inserted.	After clearing the error display 1), insert the P2 card, and copy.
8	• R			∎R	■R	At the start of copying, a vibration occurred.	After clearing the error display 1), place the unit on a stable surface. After the vibration has stopped, you can resume use.
9	• R			■R	■R	At the start of copying, an error other than insufficient HDD space, a missing P2 card, vibration, and the like has occurred.	After clearing the error display 1), try copying the data again. If the error recurs, switch P2 cards and try copying again. If the error
10						During copying, an error has occurred. (Other than if the P2 card has been pulled out)	persists even after this, contact the place of purchase.
11	●R			∎R		A formatting error has occurred with the P2 card. (Write-protected)	After clearing the error display ¹⁾ , set the write-protect switch to the opposite side from the PROTECT position. (See page E-14)
12						There is a clip that needs to be restored on the P2 card.	After clearing the error display 1), restore a clip using a P2 camera-recorder or other device before use.
13	● R			■R		The data format isn't standard.	After clearing the error display 1), try formatting the card again. If the error persists even after this, contact the place of purchase.
14						An unusable P2 card has been inserted.	After clearing the error display 1), you can resume use. For further details about P2 cards, contact the place of purchase.

¹⁾ To clear the error display, press the [POWER] button and [CANCEL] button together.

ERROR LED display (continued)

			REM	IAIN			
No.	ERROR	☐ E1	□ E2	□ E3	□ E4	Status	Corrective Action
15	●R			■R		A formatting error has occurred with the P2 card. (Other than write-protection or pulling out a P2 card)	After clearing the error display 1), try formatting the card again. If the error recurs, switch P2 cards and try formatting again. If the error persists even after this, contact the place of purchase.
16	● R		■R	■R		A [Quick format] error has occurred on the internal HDD.	There may be a problem with the internal HDD. Contact the place
17	● R			■R	■R	An [All erase] error has occurred on the internal HDD.	of purchase.
18	ΦR		■R	∎R		A S.M.A.R.T error has occurred on the internal HDD.	There may be a problem with the internal HDD. If it contains data you need, first clear the error display 1, and then back up the data on a different storage media, and contact the place of purchase.
19	● R				■R	Copying failed, after which the unit was turned ON and the error occurred.	After clearing the error display 1), try copying the data again.
20	● R				∎R	[Quick format] failed, after which the unit was turned ON and the error occurred.	Execute [Quick format] again.
21	● R				■ OR	[All erase] failed, after which the unit was turned ON and the error occurred.	Execute [All erase] again.
22	• R	■R	■R	■R	∎R	After an internal error occurred, copying and formatting is not possible.	
23	• R	■R	■R	■R	■R	An error occurred during updating.	There may be a problem with the unit. Contact the place of
24	● R	■ R			■R	Corrections are not applied. The unit's internal settings cannot be adjusted, so an error occurs.	purchase.
25	• R		■ OR			The internal lithium battery is drained.	Contact the place of purchase and replace the lithium battery. Once this error is displayed, it will continue to be displayed when the unit is turned ON until you replace the lithium battery.
26	• R	■ R	■ R	■ R	∎R	The sensor has detected impact to the HDD while writing administrative data or an HDD access error has occurred.	Turn the unit OFF and ON. After placing the unit on a stable surface, copy the data.
27	• R		■ R	■ R	■R		If the data is important, back it up on a different recording media, and proceed with [Quick format].

¹⁾ To clear the error display, press the [POWER] button and [CANCEL] button together.

ERROR LED display (continued)

	ERROR		REM	AIN			Corrective Action
No.		□ E1	□ E2	□ E3	□ E4	Status	
28	• R			■ OR		A Verify NG error has occurred when the Verify function was executed independently.	After clearing the error display 1), try copying the data again.
29	• R			■ OR		An error occurs when the Verify NG error occurred the time before, operation was terminated without checking it, and then the power is turned on.	After clearing the error display 1), try copying the data again.
30					OR		After ensuring the unit is away from the source of impact keep it off for a while.

¹⁾ To clear the error display, press the [POWER] button and [CANCEL] button together.

		COPY STATUS					_	
No.	ERROR	20	40	60	80	100%	Status	Corrective Action
31	● R	OR	OR	OR	OR		During P2 card access, the P2 card was pulled out and an error occurred.	Turn the unit OFF and ON.

Troubleshooting

If the unit seems to be malfunctioning, try checking the following points. If the problem persists, contact the place of purchase.

Symptom	What to Check
The POWER LED does not light after the [POWER] button is pressed.	Is the battery pack drained?Is the AC adapter connected correctly?
Copying does not start after a P2 card is inserted and the [START] button is pressed.	 Is an error indicating insufficient remaining charge of the battery pack being displayed?
The [REMAIN] LEDs do not light after the [button is pressed.	
The [REMAIN] LEDs do not light after the [HDD CAP] button is pressed.	• Is the POWER LED lit (green)?
The unit's internal partition names are not displayed in Explorer (Windows) or the Finder (Macintosh) when the unit is connected to a computer with the USB 2.0 cable.	- Windows AP Professional SP2 or later
P2 cards cannot be formatted.	Is the write-protect switch set to PROTECT?Is the P2 card inserted correctly?
The POWER LED merely flashes after the [POWER] button is pushed.	• Are you attempting to turn the unit ON in temperatures below 5 °C (41 °F)?

Specifications

: DC 7.9 V Power supply

Current consumption: Max. 1.3 A Normal operation, 0.8 A

indicates safety information.

Supply voltage:

Battery pack DC 7.2 V

(Option: CGR-D16, CGA-D54)

AC adapter DC 7.9 V (Option: AG-B25)

Operating environment:

In use Temperature

0 °C to +40 °C 1) (32 °F to 104 °F)

5 % RH to 85 % RH

Humidity (Non-condensing)

When stored Temperature -20 °C to +60 °C

(-4 °F to 140 °F)

Humidity 0 % RH to 90 % RH

(Non-condensing)

1) In order to protect the HDD, if the internal temperature of the HDD is outside the specified temperature range of the unit, an error is displayed and copy operations will not be allowed.

System requirements:

Verified operating systems

Windows Vista Business or higher

Windows XP Professional SP2 or later, or

Windows 2000 SP4 or later Macintosh OS X (10.5)

USB interface **USB 2.0**

Hard disk capacity:

60 GB

PC card slot:

PCMCIA Type II (CardBus) × 1

Dimensions (W x H x D):

90 mm \times 45 mm \times 180.5 mm

 $(3^{17}/_{32} \text{ inches} \times 1^{25}/_{32} \text{ inches} \times 7^{3}/_{32} \text{ inches})$

(Excluding protrusions)

Weight:

650 g (1.43 lb)

準 備	
安全上のご注意 · · · · · J-2 概要 · · · · · J-5 特長 · · · · · J-5 付属品 · · · · · · J-5 別売品 · · · · · · J-5	使用上のお願い ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・
使いかた	
各部の名称と機能J-8前面J-8上面J-9右側面J-9左側面J-10後面J-10プピー操作J-11電源ON・OFF操作J-11P2カードを入れるJ-11P2カードを取り出すJ-11	P2カードの書き込み保護・・・・・J-12 HDD残量表示・・・・・J-12 バッテリーパック残量表示・・・J-13 P2カードからHDDへのコピー・・・J-14 コピーキャンセル・・・・J-16 フォーマット・・・・J-16 P2カードフォーマット・・・・J-17 動作中の自動電源OFF対応・・・・J-17
パソコンと接続して	
パソコンに接続する ······J-18 専用アプリケーションソフトウェア について ·····J-20 P2ストアマネージャーの 起動と終了 ·····J-21	P2ストアマネージャーの画面についてJ-22HDD情報ページJ-22S.M.A.R.T情報ページJ-24動作設定ページJ-25バージョンアップページJ-26バージョンアップ手順J-27
必要なときに	
ERROR LED表示 ······J-28 修理を依頼される前に ·····J-31	保証とアフターサービス ·····J-32 定格 ····J-33

- ・Microsoft とそのロゴ、Windows は米国Microsoft Corporation の米国およびその他の国における登録商標または商標です。
- ・AppleとそのロゴMacintoshは、米国Apple Computerの米国およびその他の国における登録商標または商標です。
- · Intel、 Pentium はIntel Corporationの米国およびその他の国における登録商標または商標です。
- ・その他、本文で記載されている各種名称、会社名、商品名などは各社の商標または登録商標です。なお、本文中では™、®マークは明記していません。

日本語

安全上のご注意 (必ずお守りください)

人への危害、財産の損害を防止するため、必ずお守りいただくことを説明しています。

■誤った使い方をしたときに生じる危害や損害の程度を区分して、説明しています。



「死亡や重傷を負うおそれが大きい内容」です。



「死亡や重傷を負うおそれ がある内容 | です。



「傷害を負うことや、財産 の損害が発生するおそれが ある内容」です。 ■お守りいただく内容の種類を区分して、説明しています。





してはいけない内容です。



実行しなければならない内容です。

危険

指定以外のバッテリーパックを使わない

バッテリーパックの端子部(+・-)に金属物(ネックレスやヘアピンなど)を接触させない

バッテリーパックを分解、加工(はんだ付けなど)、加圧、加熱、火中 投入などをしない

バッテリーパックを炎天下(特に真夏の車内)など、高温になるところ に放置しない



液もれ・発熱・発火・破裂の原因になります。

- ビニール袋などに入れ、金属物と接触させないようにしてください。
- 不要(寿命)になったバッテリーについてはJ-7ページをご参照ください。
- 万一、液もれが起こったら、販売店にご相談ください。 液が身体や衣服に付いたときは、水ですぐ洗い流してください。 液が目に入ったときは、失明のおそれがあります。目をこすらずに、すぐにきれいな水で 洗ったあと、医師にご相談ください。

バッテリーパックは、専用のACア ダプターで充電する



指定以外の充電器で充電すると、 発熱・発火・破裂を起こし、け がの原因になります。

ACアダプターは、専用のバッテリーパック以外の充電には使わない



液もれ・発熱・発火・破裂など を起こし、けがをする原因にな ります。

⚠警告

内部に金属物を入れたり、水などの 液体をかけたりぬらしたりしない



ショートや発熱により、火災・ 感電・故障の原因になります。

• 機器の近くに水などの液体の入った容器 や金属物を置かないでください。

分解や改造をしない



内部には電圧の高い部分があり、 感電や火災の原因になります。 また、使用機器を損傷すること 分解禁止 があります。

• 内部の点検や修理などは、お買い上げの 販売店にご相談ください。

異常があったときは、バッテリー を外す

- •内部に金属や水などの液体、異 物が入ったとき
- •落下などで外装ケースが破損し たとき
- ●煙や異臭、異音などが出たとき



そのまま使うと、火災・感電の 原因になります。

- ACアダプターで使っている場合は、AC アダプターを外してください。
- 販売店に相談してください。

乗り物を運転しながら使わない



事故の誘発につながります。

● 歩行中でも周囲の状況、路面の状態など に十分ご注意ください。

付属品・オプションは、指定の製 品を使用する



本体に誤って指定外の製品を使 用すると、火災や事故を起こす 原因になります。

不安定な場所に置かない



落ちたり、倒れたりして、けが の原因になります。

△注意

直射日光の当たる場所や異常に温度が高くなる場所に置かない



特に真夏の車内、車のトランクの中は、想像以上に高温(約60℃以上)になります。本機やP2カード、アクセサリーを絶対に放置しないでください。外装ケースや内部部品が劣化するほか、火災の原因になることがあります。

油煙や湯気の当たるところ、湿気 やほこりの多いところに置かない



電気が油や水分、ほこりを伝わり、火災・感電の原因になることがあります。

たばこの煙なども製品の故障の 原因になることがあります。

本機の上に重いものを置いたり、 乗ったりしない



- 落下したり倒れたりして壊れ、 けがの原因になります。
- •重量で外装ケースが変形し、 内部部品が破損すると、火 災・故障の原因になります。

飛行機内で使うときは、航空会社 の指示に従う



本機が出す電磁波などにより、 飛行機の計器に影響を及ぼす恐 れがあります。

• 病院などで使うときも、病院の指示に従ってください。

長期間使用しないときや、お手入れのときは、バッテリーや、AC アダプターを外す



火災や感電の原因になります。

概要

本機(AJ-PCS060G)は、USB2.0端子(Type B)を搭載するAJ-P2CシリーズのP2カード(メモリーカード)専用のポータブルハードディスクユニットです。 本機は、P2カードカメラレコーダーで記録したデータを、本機に内蔵するHDD(60 GBのハードディスク)にコピーできます。

特長

- ₱ P2カードを1枚装着可能。
- 60 GBの2.5インチHDDを内蔵。
- 加速度センサーおよびHDDパック構造により耐衝撃性能"を向上。
- P2カードから内蔵HDDに、直接データ転送をすることにより高速コピーを実現。
- ◆ 本機とパソコンをUSB2.0対応ケーブルで接続することにより高速データ転送が可能。
 - 1) 耐衝撃性能について
 - コピー中などの動作中に衝撃や落下を検知した場合、自動的に内蔵HDDのヘッド退避を行う。
 - 内蔵HDDを緩衝材で保護するHDDパック構造導入。ただし、無破損、無故障を保証するものではありません。

付属品

- CD-ROM [P2ドライバー, P2カードマネージャー, インストールマニュアル, 取扱説明書(本書)] ·······1

別売品

● バッテリーパック VW-VBD33(1600/1560 (typ./min.) mAh)

VW-VBD55 (5400 mAh)

● ACアダプター AG-B25

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスB 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをしてください。



ヨーロッパ連合以外の国の廃棄処分に関する情報

このシンボルマークはEU域内でのみ有効です。

製品を廃棄する場合には、最寄りの市町村窓口、または販売店で、正しい廃棄方法をお問い合わせください。

使用上のお願い

本機について

本機には、ハードディスクが内蔵されており、パック構造により、落下/衝撃性能を向上させる機構はもっていますが、無破損、無故障を保証するものではありません。 あらかじめ、ご了承ください。

別売のバッテリーパックおよびACアダプターをご用意ください。

ハードディスクについて

本機には、ハードディスク(以下HDD)が内蔵されています。 HDDや、HDDに記録したデータが損なわれたり、動作が中断したりする場合がありますので、設置時や使用時は以下のことに気をつけてください。

- 動作中に振動や衝撃を与えない。(HDDが破損することがあります。)
- 振動する場所や不安定な場所で使用しない。
- 密閉された場所、放熱ができない場所、風通しの悪い場所では使用しない。
- 温度差の激しい場所では使用しない。
 - →温度差の激しい場所で使用すると、"つゆ付き"が起こる場合があります。本機内部に"つゆ付き"が起こったまま使用すると、HDDに傷が付き、故障の原因になります。また、室温の温度変化は、毎時20 ℃以下(1時間あたりの温度変化が20 ℃以内)に保つようにしてください。
- 湿度の高い場所で使用しない。
- 電源ONのときは、バッテリーパックおよびACアダプターを抜かない。
- 移動させるときには、必ず [POWER] ボタンを2秒以上押して終了処理をし電源をOFFする。 完全に回転が止まってから(2分程度待ってから)、振動や衝撃を与えないように動かす。 (電源を切っても、HDDはしばらくの間は惰性で回転しています。)
- 海抜-90 m以下および海抜3000 m以上の場所では使用しない。

HDDは非常に精密な機器で、使用状況によっては部分的な破損や最悪の場合データの読み書きができなくなる恐れも十分にあります。このため内蔵HDDは、コピーしたデータの恒久的な保管場所ではなく、あくまでも別の記録媒体にバックアップするまでの、一時的な保管場所として使用してください。

■ 記録データについて

HDDが故障すると、HDDに記録された内容が失われます。重要なデータは必ず別の記録媒体にバックアップをとるようにしてください。バックアップ方法はJ-20ページを参照してください。

HDDの故障あるいは何らかの不具合によるデータの損失、ならびにこれらに関するその他の直接・間接の損害につきましては、当社は責任を負いかねます。あらかじめご了承ください。

■ 本機の廃棄・譲渡時におけるHDD内のデータ消去について

お客様が本機を廃棄・譲渡を行う際に、HDD内の重要なデータが流出するというトラブルを回避するためには、HDD内にコピーしたすべてのデータを、お客様の責任において消去することが非常に重要です。

廃棄するためには、金づちや強い磁気によって物理的・磁気的に破壊して、読めなくすることを推奨します。

お手入れについて

お手入れの際は、ベンジン、シンナー、アルコールなどの溶剤を使わない

- お手入れの際は、バッテリーパックを取り外すか、またはACアダプターのコンセントを抜 いてください。
- 溶剤を使うと外装ケースが変質したり、塗装がはげる恐れがあります。
- 本機は、柔らかい、乾いた布でほこりをふいてください。汚れがひどいときは、中性洗剤 を水でうすめ、その液にひたした布をよく絞ってから汚れをふき取ってください。そのあ と、乾いた布でからぶきしてください。
- 化学ぞうきんをご使用の際は、その注意書に従ってください。

メンテナンスについて

内蔵ハードディスクドライブ(HDD)は補修用性能部品です。

本機を最良の状態でお使いいただくために、ユーザーによる定期的な状態確認と販売店による定 期保守をしていただくことをお勧めします。

定期保守の内容につきましては販売店にお問い合わせください。

定期保守は、下記を目安に依頼してください。確認のしかたについては、J-23ページを参照し てください。

稼働時間 2000時間毎

お願い:


- 保守サービスの際には、HDDの記録内容が失われることがあります。 保守サービスをご依頼の際には、必ず記録内容をバックアップしていただきますようお願いいたします。 なお、失われたデータに対しての補償は致しかねますの で、あらかじめご了承ください。
- HDD故障時には、保存されているデータの補償、修復はできません。 HDDは一時保存用ですので、早めのデータのバックアップをお勧めいたします。

AC アダプターについて

別売のACアダプター(AG-B25)を使用してください。 で使用の際には、別売品の取扱説明書をよく読んでご使 用ください。

ノート:

ACアダプターでご使用になるときは、本機に接続される DCケーブルのバッテリー型コネクターの根元に同梱のフ ェライトコアを取り付けてください。取り付けの際には、 ケーブルをフェライトコアに2回巻きつけてください。こ のフェライトコアを使用しないと、他の機器に影響を与え ることがあります。

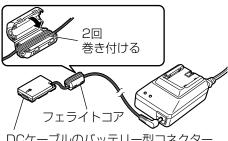

DCケーブルのバッテリー型コネクター

バッテリーパックについて

<u>別売のバッテリーパックを使用してください。</u>

で使用の際には、別売品の取扱説明書をよく読んでで使用ください。

不要になった電池(バッテリーパック)は、貴重な資源を守るために、廃棄しないで充電式電池 リサイクル協力店へお持ちください。

使用済み充電式電池(バッテリーパック)の届け先


最寄りのリサイクル協力店へ。詳細は、有限責任中間法人JBRCのホームページ http://www.jbrc.net/hpをご参照ください。

使用済み充電式電池の取り扱いについて

- ●端子部をセロハンテープなどで絶縁してください。
- ◆分解しないでください。



電池使用

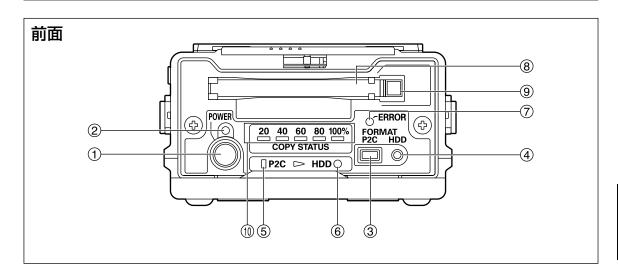

① POWERボタン

電源をON/OFFするボタンです。 OFF時、[POWER] ボタンを押すと、電源が ONします。ON時、<u>2秒以上</u> [POWER] ボタン を押すと、電源がOFFします。

2 POWER LED

電源ON時に点灯します。 ただし、電源ON後の起動処理中や電源OFF時 の終了処理中は、点滅します。

③ P2Cボタン

P2カードをフォーマットするボタンです。 HDDにコピー完了後、必要に応じてP2カードをフォーマットしてください。 (「写 J-16ページ参照)

ノート:

一度フォーマットしたデータは、復元できません。すべて消去してよいか確認してからフォーマットを行ってください。

④ HDDボタン

内蔵HDDをフォーマットするボタンです。内蔵HDDにコピーしたデータが、不必要になったときに一括で消すことができます。(CFJ-17ページ参照)

ノート:

一度フォーマットしたデータは、復元できません。すべて消去してよいか確認してからフォーマットを行ってください。

⑤ P2C LED

P2カードアクセス時に点灯・点滅します。 (ごより14、J-16、J-27ページ参照)

® HDD LED

内蔵HDDアクセス時に点灯・点滅します。 (Cg J-14、J-17、J-27ページ参照)

⑦ ERROR LED

エラー発生時に点灯・点滅します。 前面の [COPY STATUS] LEDと上面の [E1~E4] LED、[P2C] LEDおよび [HDD] LEDとの組み合わせでエラー内容を表示しま す。(ごJ-13、J-28~J-30ページ参照)

® P2カードスロット

P2カード専用スロットです。 ⑨ のEJECTボタンが押し込まれていることを確認し、P2カードを水平にして挿入してください。

<u>P2カード以外の物は、絶対に挿入しないでく</u> ださい。


⑨ EJECTボタン

P2カードスロットに挿入したP2カードを、取り出すときに使用します。 (ごJ-11ページ参照)

(10) COPY STATUS LED

データコピーやフォーマット時の進行状態を表示します。

(Cg J-14、J-16、J-17、J-27、J-30ページ参照)

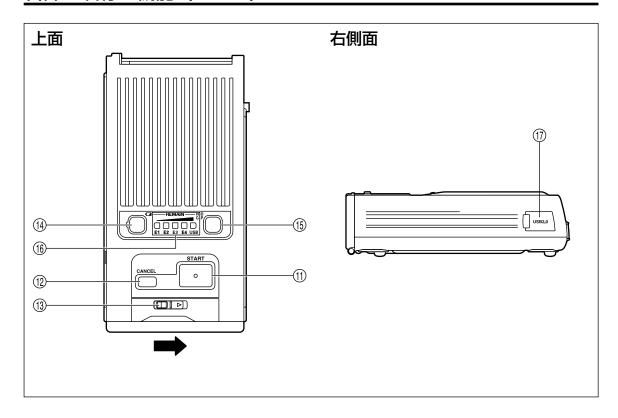

⑪ STARTボタン

データコピーやフォーマットを開始するボタン です。

[START] ボタンを**2秒以上**押すと、各処理が 開始します。

① CANCELボタン

コピーを中止するボタンです。 コピー処理中に、[CANCEL] ボタンを**2秒以上** 押すと、コピーを中止します。

⑬ スライドノブ

ノブを矢印方向にスライドすると、フロントパネルカバーが開きます。

④ バッテリーパック残量表示 [□] ボタンボタンを押すと ⑥ の [REMAIN] にバッテリーパック残量を約2秒間表示します。 (□J-13ページ参照)

ただし、[USB] はUSB2.0対応ケーブル接続時、緑色点灯します。

⑮ HDD残量表示 [HDD CAP] ボタン

ボタンを押すと ® の [REMAIN] に内蔵HDD 残量を約2秒間表示します。

[REMAIN] は、コピー可能な枚数を示します。 (ごJ-12ページ参照)

ただし、[USB] はUSB2.0対応ケーブル接続時、緑色点灯します。

⑥ バッテリーパック/HDD残量表示 兼 エラー表示LED [REMAIN]


バッテリーパックや内蔵HDDの残量とエラー発生時の内容を表示します。

⑪ USB2.0 端子(Type B)

本機とパソコンおよびUSBホスト機能を有する P2機器を接続するときは、この端子にUSB2.0 対応ケーブルをつないでください。

ノート:

本機を使用するには、USB2.0対応のパソコンが必要です。

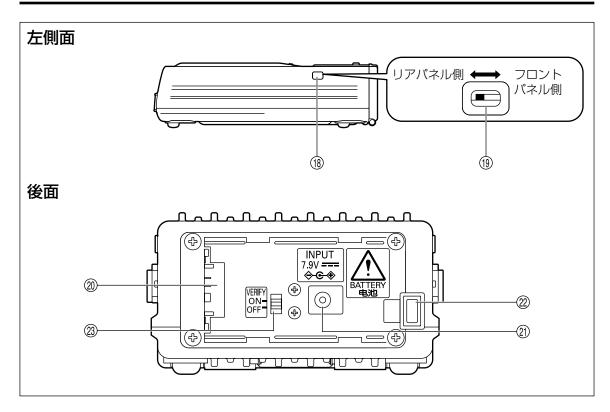

® スライドスイッチカバー

⑩ スライドスイッチ

フロントパネル側になっているとき本機用ソフトウェアをバージョンアップできます。 通常時はリアパネル側です。 (ごJ-27ページ参照)

② 電源装着部

別売のバッテリーパックまたはACアダプター を装着してご使用ください。

② DC IN端子(7.9 V)

② バッテリーロック解除ボタン

別売のバッテリーパックおよびACアダプターを取り外すときは、ボタンを押しながらボタン側にスライドさせてください。

② VERIFY スイッチ

P2カードから内蔵HDDにコピー後、Verifyチェックすることができます。 (ごよ14ページ参照)

ON: チェックする OFF: チェックしない

ノート:

コピー精度維持のため、VERIFYスイッチONで使用してください。OFFで使用の場合、正しくコピーできない可能性があります。ただし、ONで使用の場合、OFFと比べて2倍以上の時間がかかります。

電源ON・OFF操作

本機の電源には、別売のバッテリーパックか、ACアダプターをご使用ください。 (ごJ-5ページ参照)

バッテリーパックおよびACアダプターが、本機に確実に接続できているか、確認してください。 接続については、別売品の取扱説明書を参照してください。

各操作前には、電源ONしてください。また、操作後、使用しない場合には電源OFFしてください。

電源ON

[POWER] ボタン を押すと、電源がONします。起動処理中はPOWER LEDが点滅し、使用可能になると緑色に点灯します。

ノート:

- 低電圧エラーが発生している状態([ERROR] LEDが赤色点灯、[REMAIN] の [E2] が赤色点滅)のときは、充電したバッテリーパックに変換するか、ACアダプターに切り換えて電源を再起動してください。
- ●内蔵HDDの温度が所定温度以下([ERROR] LEDが赤色点灯、[REMAIN] の [E1] が赤色点灯、 [E2] が赤色点滅)のときは、所定温度まで暖機運転を行います。暖機運転中は [START] ボタンなどは、受けつけません。
- 暖機運転は消費電力が大きいため、使用するバッテリーパックの残量によっては暖機運転完了後、 低電圧エラーになることがあります。発生時は一度電源をOFFし、再度電源をONにしてください。


電源OFF

[POWER] ボタン を**2秒以上**押すと、電源がOFFします。 POWER LEDが消灯します。ただし、終了処理中は点滅します。

P2カードを入れる

本機のP2カードスロットにP2カードを挿入するときには、 必ずP2カードを水平にして確実に挿入してください。

斜めのまま、無理に挿入すると故障の原因になります。

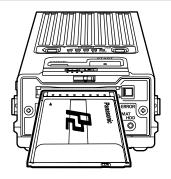

P2カードを取り出す

EJECTボタンを押し、ボタンが飛び出したあと、もう一度押すと、P2カードが取り出せます。

P2カードアクセス([P2C] LED点灯)中にP2カードを取り出さないでください。データが壊れたり、P2カードが故障する可能性があります。

ノート:

パソコンに接続して使用している場合は、カードの停止処理後に、EJECTボタンを押してください。

- Windowsの場合:
 - 「スタート」→「マイコンピュータ」をクリックする
 - 2. P2カードのドライブ(リムーバブルディスク)を右クリックして、"取り出し"を選択する
 - 3. EJECTボタンを押して、P2カードを取り出す
- Macintoshの場合:

デスクトップ上に表示されたP2カードのボリュームを選択し、画面上部のメニューバーの[ファイル] →[取り出し]を選択して実行するか、 もしくはゴミ箱に移動してください。

P2カードの書き込み保護

P2カードを挿入している状態で、書き込み禁止スイッチを切り換えても、以下の設定は機能しません。P2カードの挿入前に、書き込み禁止スイッチを確認してください。



HDD残量表示

本機内蔵HDDには、最大15枚分のP2カードをコピーすることができます。(ただし、8 GBのP2カードのみ使用してコピーすると最大7枚分です。)内蔵HDDにコピーできる枚数は、[HDDCAP] ボタンを押し、[REMAIN] の表示で確認できます。

【HDD残量(コピー可能カード枚数)表】参照。

電源ONの状態でコピー可能なP2カードの枚数を確認する

挿入しているP2カードの種類に応じて、[HDD CAP]ボタンを以下の【HDD残量(操作回数)表】に示す回数を押してください。

[REMAIN]のLEDが1秒間橙色点灯し、そのあと以下の【HDD残量(コピー可能カード枚数)表】のように表示します。

【HDD残量(操作回数)表】

■ : 点灯 OR : 橙色

				REMAIN		
P2カードの種類	回数	☐ E1	□ E2	□ E3	□ E4	□ USB
2 GB/4 GB	1	■ OR				
8 GB	2	■ OR	■ OR			
16 GB	3	■ OR	■ OR	■ OR		

【HDD残量(コピー可能カード枚数)表】

■ : 点灯 ■ : 点滅 R : 赤色 G : 緑色

残量			REMAIN		
(コピー可能 カード枚数)	□ E1	E2	□ E3	□ E4	USB
0	∎R	∎R	■R	■R	∎R
1	■G				
2	■G	■G			
3	■G	■G	■G		
4	■G	■G	■G	■G	
5枚以上	■G	■G	■G	■G	■G
フル(未使用時)	∎G	■G	■G	∎G	∎G

[REMAIN]の表示が約2秒間表示したあとに消灯します。

バッテリーパック残量表示

別売のバッテリーパックの残量を確認することができます。バッテリーパック残量は、〔□】ボタンを押し、「REMAIN」の表示で確認できます。【バッテリーパック残量表】参照。

以下の状態のときには、コピー操作できません。

- ・低電圧エラー([ERROR]LEDが赤色点灯、[REMAIN]の[E2] が赤色点滅)
- ・バッテリーパック残量不足エラー(16 GB以上のP2カードをコピーするときに検出) ([ERROR]LEDが赤色点灯、[REMAIN]の[E2]が赤色点灯)

また、残量がO(ゼロ)になると、【バッテリーパック残量表】のようにエラー表示をし、すぐに電源をOFFします。充電した別売のバッテリーパックか別売のACアダプターに切り替えてください。

電源ONの状態で [□] ボタンを押す

以下の【バッテリーパック残量表】のように表示します。

【バッテリーパック残量表】

バッテリーパ	ック			REMAIN			
残量	,,	□ E1	□ E2	□ E3	□ E4	USB	OERROR
100		■G	■G	■G	■G	■G	
		■G	■G	■G	■G		
		■G	■G	■G			
		■G	■G				
1		■G					
		■R					
0	1	∎R	∎R	∎R	∎R	■R	●R

[REMAIN]の表示が約2秒間表示したあとに消灯します。

ノート:

ACアダプター使用時に、100以外のLED表示の状態になる場合がありますが、問題ありません。

P2カードからHDDへのコピー

P2カードから内蔵HDDに、直接データ転送されるので、高速コピーができます。 本機の[P2C]LED、[HDD]LEDが点灯中は、本機の電源をOFFしたり、P2カードを取り出さないでください。

別売のバッテリーパックを使用しているときには、コピー操作をする前に、バッテリーパックの残量を確認してください。

以下の状態のときには、コピー操作できません。

- ・低電圧エラー([ERROR]LEDが赤色点灯、[REMAIN]の[E2] が赤色点滅)
- ・バッテリーパック残量不足エラー(16 GB以上のP2カードをコピーするときに検出) (IERROR1LEDが赤色点灯、IREMAIN1のIE21が赤色点灯)

充電した別売のバッテリーパックか別売のACアダプターに切り替えてください。

- 1. 雷源ONの状態でP2カードスロットに、P2カードを挿入する
- 2. [HDD CAP] ボタンを押し、残量(コピー可能カード枚数)が 1 枚以上であることを確認する 残量(コピー可能カード枚数)が 0 枚の場合は、必要なデータを別の記録媒体にバックアップしたあと HDDフォーマットをしてください。(ぽ J-12、J-17ページ参照)
- 3. [START] ボタンを2秒以上押す

コピーが開始し、Verifyチェック¹⁾ を行います。([VERIFY]スイッチON時) コピーの進行状態が、以下のようにLED表示されます。

進行状態							
(%)	20	40	60	80	100%	□P2C	HDDO
00-19	■ G						
20-39	- G	- G					
40-59	- G	- G	■ G			中は	中は
60-79	- G	- G	- G	- □ G		∎or	● OR
80-99	- G	- G	- G	- G	≖ G		
100	- G	- G	- G	- G	- G		

- 4. [COPY STATUS] LEDすべて緑色点灯していることを確認する
- 5. [POWER] ボタン を押す

コピーが完了し、[COPY STATUS] LEDが消えます。

ノート:

● すでにコピー済みのP2カード内のデータは、再度コピーをすることはできません。

この場合、[VERIFY]スイッチの設定により、以下の動作を行います。

[VERIFY]スイッチOFF: 上記手順3. を実行しても、すぐにコピー進行状態100%の表示になり

ます。

[VERIFY]スイッチON:上記手順3.を実行した場合、コピーは行わずにコピー進行状態40-

59%の表示になり、Verifyチェックが実行されます。

●パソコンなどで、P2カード内のデータを編集したり、追加/削除した場合でも、同一データと認識することがあります。この場合、[VERIFY]スイッチの設定により、以下の動作を行います。

[VERIFY]スイッチOFF:上記手順3. を実行しても、すぐにコピー進行状態100%の表示になり

ます。

「VERIFY]スイッチON:上記手順3.を実行した場合、コピーは行わずにコピー進行状態40-

59%の表示になり、Verifyチェックが実行され、違うデータとして認識

し、Verify NGエラー2)で終了します。(🗊 J-30ページ参照)

(次ページにつづく)

- ●本機内部温度が高くなると自動的に、コピー速度が遅くなります。 この場合 [P2C] LED、[HDD] LEDの点滅も遅くなります。
- コピー中に電源をOFFしたり、P2カードを抜くなどコピーが正常に完了できなかった場合、HDD残量(コピー可能カード枚数)がコピーに失敗したP2カード枚数分減ります。
- [COPY STATUS] LEDがすべて緑色点滅したときは、何も記録されていないP2カードを挿入して、上記手順3. を実行したときです。
- 不良クリップ³⁾ が含まれるP2カードは事前に、P2カメラレコーダー等で修復してから本機にてコピーしてください。不良クリップのままコピーすると、コピーされた不良クリップは修復できなくなることがあります。
- 1) P2カードと内蔵HDDに記録されたデータが同一であるかのチェックを行います。
- 2)Verify NGエラーになった場合、HDDパーティション情報欄(『J-22ページ参照)が"ERROR"になります。この場合、該当のP2カードは再度コピー可能となりますが、"ERROR"となったパーティションはそのまま残ります。
- 3) 記録中にP2カードを抜いたり、電源が切れた場合にできる、記録不具合のクリップです。 P2カメラレコーダー等で、サムネール画面を表示したときに黄色い図マークがついているクリップです。

コピーキャンセル

コピーが完了していないときに、コピーを中止することができます。

1. [CANCEL] ボタンを2秒以上押す

[COPY STATUS] LED、[P2C] LED、[HDD] LEDが以下の表示になります。

■ : 点灯 OR : 橙色

	CO					
20	40	<u>60</u>	80	□P2C	HDDO	
- OR	- OR	— OR	— OR	- OR	_	_

2. [POWER] ボタン を押す

コピーキャンセルが完了し、[COPY STATUS] LEDが消えます。

ノート:

コピーされたデータは、コピーキャンセルで自動的に削除されます。

フォーマット

P2カードフォーマット

P2カードに記録しているデータをすべて消去できます。

一度フォーマットしたデータは、復元できません。すべて消去してよいか、確認してからフォーマットを行ってください。

本機の[P2C] LEDが点滅中は、本機の電源をOFFしたり、P2カードを取り出さないでください。P2カードが故障する可能性があります。

P2カードの書き込み禁止スイッチが、PROTECT側になっている場合にはフォーマットできません。また、P2カードスロットにP2カードを挿入した状態で、書き込み禁止スイッチを切り換えてもフォーマットできません。

1. 電源ONの状態でP2カードスロットに、P2カードを挿入する

2. [P2C] ボタンを2秒以上押す

[COPY STATUS] LED、[P2C] LED、[HDD] LEDが以下の表示になります。

	CO					
20	40	60	80	□P2C	HDDO	
■ OR	■OR	_				

3. 2秒以内に [START] ボタンを押す

[COPY STATUS] LED、[P2C] LED、[HDD] LEDの表示が消えて、P2カードフォーマットが開始すると、[P2C] LEDが橙点滅になり、完了します。

ノート:

手順2. の [COPY STATUS] LED、[P2C] LED、[HDD] LEDが表示されたのち、2秒以内に手順3. の [START] ボタンを押さなければ、P2カードのフォーマットが開始されません。 再度、手順2. から操作してください。

フォーマット(つづき)

HDDフォーマット

本機内蔵HDDにコピーしたデータをすべて消去できます。

本機を安定した場所に置いてフォーマットを行ってください。

衝撃や振動を与えると故障の原因になります。

一度フォーマットしたデータは、復元できません。すべて消去してよいか、確認してからフォーマットを行ってください。

本機の「HDD」LEDが点灯中は、本機の電源をOFFしないでください。

電源ONの状態で[HDD] ボタンを2秒以上押す

[COPY STATUS] LED、[P2C] LED、[HDD] LEDが以下の表示になります。

● : 点灯 **■** : 点滅 OR: 橙色

	CO					
20	40	60	80	□P2C	HDD○	
■ OR	_	● OR				

2. 2秒以内に [START] ボタンを押す

[COPY STATUS] LED、[P2C] LED、[HDD] LEDの表示が消えて、内蔵HDDフォーマットが開始すると、[HDD]LEDが橙点滅になり、完了します。

ノート:

- ●手順1. の [COPY STATUS] LED、[P2C] LED、[HDD] LEDが表示されたのち、2秒以内に 手順2. の [START] ボタンを押さなければ、内蔵HDDのフォーマットが開始されません。 再度、手順1. から操作してください。
- ●内蔵HDDに自動的に15パーティション作成されます。

動作中の自動電源OFF対応

- 本機は、コピーおよびフォーマットなどの動作をしていない状態が、10分経過すると自動的 に電源がOFFします。ご使用になるときには、再度電源をONしてください。
- 本機とパソコンをUSB2.0対応ケーブルで接続しているときは、コピーおよびフォーマットなどの動作をしていない状態で放置されても、自動的に電源はOFFしません。使用しないときは、[POWER] ボタンを2秒以上押して、電源をOFFしてください。
- コピー完了状態やエラー発生後のエラー確認待ちのときは、自動的に電源はOFFしません。

ノート:

P2ストアマネージャー動作設定ページの"自動電源OFFまでの時間"欄で、電源を自動的にOFFするまでの時間を設定できます。

"設定"欄の[OFFしない]/[5分]/[10分]/[15分]/[20分]/[25分]/[30分]から選択できます。初期設定は「10分」です。(ごJ-25ページ参照)

パソコンに接続する

本機とパソコンをUSB2.0対応ケーブルで接続すると、P2カードおよび内蔵HDDのデータを、 パソコンにバックアップできます。

■ 動作環境

P2ドライバー、本機専用ドライバー、本機専用アプリケーションソフトウェアは、以下の条件を満た すパソコンでご使用ください。

OS: Windows Vista Business以上

Windows XP Professional SP2以降

Windows 2000 SP4以降 Macintosh OS X (10.4)

USB: USB2.0ポートを装備

ノート:

• Windows Vistaで、本機専用アプリケーションソフトウェアを使用する場合、Administrator権 限を持つユーザー名でログインしてから実行してください。起動時、「ユーザーアカウント制御」 画面が表示されることがあります。そのときは、"許可"をクリックして操作を続けてください。

■ インストール

● Windowsの場合:

付属CD-ROM内のP2ドライバーを、パソコンにインストールしてください。 このとき、本機専用アプリケーションソフトウェアも同時にインストールされます。 インストール手順については、付属インストールマニュアルを参照してください。

ノート:

P2ドライバーは、USB2.0対応ケーブルを接続してP2カードに高速アクセスするためのソフトウ ェアです。

Macintoshの場合:

本機専用ドライバーと本機専用アプリケーションソフトウェアを以下の手順に従ってインストー ルしてください。

- 7. パソコンに付属CD-ROMを挿入する
- 2. CD-ROM内のMacintoshフォルダーをダブルクリックする
- 3. AJ-PCS060Gフォルダーをダブルクリックし、インストールするパソコンに応じた以下のフォルダーをドラッグアンドドロップでデスクトップなどにコピーする PowerPCベースのMac OS Xコンピューターの場合: PPC

IntelベースのMac OS Xコンピューターの場合 : INTEL

- 4. 上記3.でコピーしたフォルダーの中にあるディスクイメージモジュール "P2StoreDriver.dmg"を ダブルクリックする
- 5. "P2StoreDriver.pkg"をダブルクリックする インストール画面が表示されますので、画面の指示に従ってインストールを行ってください。

以下は、IntelベースのMac OS Xコンピューターへのインストール時のみ行ってください。

- 6. 画面左上の "**6**" マークをクリックし、"システム環境設定"を選択して起動する 7. "システム"の "アカウント"をクリックする 8. アカウント画面で "ログイン項目"をクリックする 9. 上記3.でコピーしたフォルダーからP2ストアマネージャーのアイコンを "ログイン項目" 画面に 「ログイン項目" 画面に ドラッグアンドドロップする
- 10. "隠す" ボタンをクリックしてチェックマークを表示させる
- 11. 一度ログアウトして、再度ログインするとP2ストアマネージャーが自動起動して"Dock"に表示さ れる

■ アンインストール

● Windowsの場合:

アンインストール手順については、付属インストールマニュアルを参照してください。

Macintoshの場合:

アンイストールはパソコン上のAJ-PCS060Gフォルダー(P2ドライバーと本機専用アプリケーシ ョンソフトウェア)を直接ゴミ箱に移動し、ゴミ箱の中身を消去してください。 また、IntelベースのMac OS Xコンピューターでは、インストール時に登録した"ログイン項目"も 削除してください。

パソコンに接続する(つづき)

■ 接続

- 1. パソコンを起動する
- 2. 本機とパソコンをUSB2.0対応ケーブルで接続する
- **3. 本機の [POWER] ボタン を押し、電源をONする** 本機のPOWER LEDが緑色に点灯し、本機が接続されたことを自動的に認識します。

ノート:

- ケーブルは市販品のUSB2.0対応ケーブルをご使用ください。必ず、3 m未満のケーブルをご使用ください。ケーブルの長さが3 mを超える場合は正しく動作しません。
- 本機を2台以上パソコンに接続しないでください。
- ●パソコンから本機への書き込みはできません。
- P2カードおよび内蔵HDDにアクセス中は、P2カードやUSB2.0対応ケーブルを抜かないでください。ご使用のパソコンに異常が発生する可能性があります。
- ●本機とパソコンを接続している状態でP2カードを取り出す場合は、J-11ページの "P2カードを取り出す"のノートを参照してください。

Windowsの場合:

- 本機とパソコンをUSB2.0対応ケーブルで接続すると、最大16パーティション(内蔵HDD: 15, P2カード: 1)が、パソコンに追加されます。(ドライブレターへマウントする場合)
- 追加されたパーティションは、すでに割り当てられているネットワークのドライブと重なる場合があります。重なって見えないパーティションがある場合は、P2ストアマネージャーを使用してフォルダーにマウントしてください。J-23ページの ⑤マウント設定ボタンを参照してください。
- ●J-14ページの "P2カードからHDDへのコピー"操作で使用しないパーティションは、パソコンからアクセスできません。J-22ページの "HDD情報ページ"で割り当てられたドライブレターもしくは指定フォルダーを確認してください。

Macintoshの場合:

- ●各パーティションがフォルダーとしてデスクトップに表示されます。
- コピー済みパーティション数とデスクトップ上に表示されるフォルダー数が異なる場合には、接続エラーが発生します。ディスクユーティリティーにて再マウントするか、パソコンを再起動して、再度確認してください。

■ 取り外し

- 1. USB接続の切断処理を行う
 - Windows Vista Business、Windows XP Professionalの場合: タスクトレイにある"ハードウェアの安全な取り外し"アイコンをダブルクリックし、画面の指示に従って"Panasonic P2 series USB Devices"を停止してください。
 - Windows 2000の場合: タスクトレイにある"ハードウェアの取り外しまたは取り出し"アイコンをダブルクリックし、 画面の指示に従って"Panasonic P2 series USB Devices"を停止してください。
 - Macintoshの場合:
 本機接続で表示されたすべてのフォルダーを選択し、画面上部のメニューバーの[ファイル]→
 [取り出し]を選択して実行するか、もしくはゴミ箱に移動してください。
- 2. 本機の [POWER] ボタン を2秒以上押して、電源をOFFする 本機のPOWER LEDが消灯します。
- 3. USB2.0対応ケーブルを抜く

パソコンに接続する(つづき)

■ バックアップ方法について

内蔵HDDに蓄えられた重要なデータを保護するために、パソコンなどにデータの複製を作成することをお勧めいたします。

必ずパソコンの空き容量を確認してからバックアップを行ってください。

Windowsの場合:

●エクスプローラーを使用する場合:

本機各パーティションの最上位フォルダーおよびファイルを選択し、パソコン上の任意のフォルダーにコピーしてください。本機の全パーティションで同じ操作をくり返してください。

) "P2 ビューアー" ソフトウェアを使用する場合:
必要なクリップを選択して、仮想ドライブ設定されたパソコン上の任意のフォルダーにコピーしてください。操作方法については、ソフトウェアの取扱説明書を参照してください。

Macintoshの場合:

● Finderを使用する場合:

デスクトップに表示される各フォルダー(本機各パーティション)をダブルクリックして開き、最上位フォルダーおよびファイルを選択し、パソコン上の任意のフォルダーにコピーしてください。本機の全パーティションで同じ操作をくり返してください。

専用アプリケーションソフトウェアについて

本機専用アプリケーションソフトウェアは、本機 (AJ-PCSO6OG)の状態表示や操作、内蔵 HDDの日常点検を行うときに使用するソフトウェアです。

■ 主な機能

- 1. P2ストアマネージャー
 - HDD情報表示

本機内蔵HDDのパーティション情報、自己診断情報などを確認することができます。

- ◆本機 (AJ-PCS060G) の動作設定本機の自動電源OFFの有効/無効などの動作設定を行うことができます。
- ◆本機(AJ-PCS060G)のソフトウェアバージョンアップ 弊社ホームページから、本機のソフトウェアをダウンロードして、バージョンアップを行うことができます。

2. Hdd Maintenance

●内蔵HDDの日常点検

本機(AJ-PCSO6OG)内蔵HDDの全面アクセスによる状態確認を行うことができます。 操作方法については、同梱の「日常点検と定期保守のおすすめ」を参照してください。

P2ストアマネージャーの起動と終了

- 1. 本機とパソコンをUSB2.O対応ケーブルで接続する
- 2. 本機の [POWER] ボタンを押し、電源をONする 本機POWER LEDが緑色に点灯し、本機と接続されたことを自動的に認識します。
- 3. P2ストアマネージャーを起動する

Windows Vista Business、Windows XP Professionalの場合:

[スタート] → [すべてのプログラム] → [Panasonic P2] → [P2ストアマネージャー] を選択します。

Windows 2000の場合:

[スタート] → [プログラム] → [Panasonic P2] → [P2ストアマネージャー] を選択します。

Macintoshの場合:

AJ-PCS060Gフォルダーにある本アプリケーションソフトのアイコンをクリックしてください。

- 4. P2ストアマネージャーの画面左下 "接続状態: 接続中"表示になっていることを確認する 本機の状態表示や操作などを行うことができます。(CF J-22ページ参照)
- 5. P2ストアマネージャーを終了する

Windowsの場合:

ウィンドウ右上の図ボタンをクリックします。

Macintoshの場合:

画面上部のメニューバーの [P2ストアマネージャー] → [P2ストアマネージャーを終了] をクリックします。

この状態で再度本機を接続した場合、必ずP2ストアマネージャーを再起動させてください。 (IntelベースのMac OS Xコンピューターの場合のみ)

P2ストアマネージャーの画面について

基本の画面説明



① ページ切り替えタブ

タブをクリックすると、それぞれのページに切り替わります。

② ページ表示領域


本機の情報を表示するための欄や、操作を行うためのボタンなどが表示されます。

③ 接続状態表示領域

本機がパソコンに接続されている場合は、"接続状態: 接続中"、接続されていない場合は、 "接続状態: 切断"と表示されます。

HDD情報ページ

本機内蔵HDDのパーティション情報確認とフォーマットおよびマウント方式設定ができます。 (マウント方式設定は、Windowsの場合のみの機能です。)

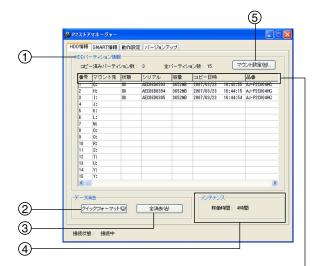

① HDDパーティション情報欄

P2カードからコピーしたデータのパーティション情報を表示します。



a 番号

パーティション番号を表示します。

6マウント先

割り当てられたドライブレター、もしくは指定フォルダー名を表示します。 正しく表示されない場合は、USBケーブルの抜き差しまたはパソコンの再起動を行い、再度確認してください。

G 状態

パーティション状態を表示します。

"OK": 正常

"ERROR": コピーもしくはVerify中

に異常が発生した

シリアル

コピー元のP2カードのシリアルナンバーを表示します。

②容量

コピー元のP2カードの容量(メガバイト単位)を表示します。

- ●コピー日時
 - コピーした日時を表示します。
- ・
 日番(PowerPCベースのMac OS Xコンピューターの場合は無し)

コピー元のP2カードの品番を表示します。

② クイックフォーマットボタン

内蔵HDDのクイックフォーマットを実行でき ます。

- 1.[クイックフォーマット] ボタンをクリックする 実行してよいかどうかの確認ダイアログが表示されます。
- 2.[はい] をクリックする クイックフォーマットが実行します。^{1),2)}

(次ページにつづく)

③ 全消去ボタン


内蔵HDDの全領域にOを書き込む処理を実行できます。

バッテリーをお使いの場合には、ACアダプターに切り換えてください。

- 1. [全消去] ボタンをクリックする 実行してよいかどうかの確認と、ACアダプ ター接続の確認ダイアログが表示されます。
- 2. [はい] をクリックする 全領域にOを書き込む処理が実行します。1>~3>
- ④ メンテナンス欄

内蔵HDDの稼動積算時間が表示されます。

⑤ マウント設定ボタン (Windowsの場合のみ) ドライブレターへのマウントもしくは、指定フォルダーへのマウントを選択できます。 [マウント設定] ボタンをクリックすると以下の画面が表示されます。



- ドライブレターへマウントする場合:
 - 1. [ドライブレターへマウント]を選択する
 - 2. [OK]ボタンをクリックする
 - 3. 画面の指示に従って本機を再起動する
- 指定フォルダーにマウントする場合 4)~12):
 - 1. [NTFSフォルダーへマウント]を選択する マウント先のフォルダーを変更する場合 は[参照]ボタンをクリックし、マウント 先を指定してください。
 - 2. [OK]ボタンをクリックする
 - 3. 画面の指示に従って本機を再起動する

ノート:

- 1) Macintosh用ソフトでフォーマットした場合には、フォーマット終了後、必ずUSB2.0対応ケーブルの抜き差しなどを行い、全データが消えたことを確認してください。
- 2) [クイックフォーマット] や [全消去] を実行するときは、本機を安定した場所 に置いてください。

衝撃や振動を与えると、故障の原因になります。

[クイックフォーマット] や [全消去] を 実行すると、内蔵HDD内すべてのデー 夕が消去されます。


必要なデータがある場合には、フォーマットを行うまえに別の記録媒体にバックアップしてください。

- 3) 全領域に0を書き込む処理は、実行処理 時間が45分ほどかかります。必ずACア ダプターを接続して実行してください。
- 4) [NTFSフォルダーへマウント] を選択した場合には、本機内蔵HDDの各パーティションは順番にサブフォルダー "pa01" ~ "pa15" にマウントされます。指定フォルダー以下にサブフォルダー "pa01" ~ "pa15" がない場合は自動的に新規作成されます。
- 5) 指定したNTFSフォルダーは、以下の場合マウントできません。
 - サブフォルダー "pa01" ~ "pa15" が 空でないとき
 - NTFS (ファイルシステム) でないとき
- 6) [NTFSフォルダーへマウント] を実行した後に、本機内蔵HDDをフォーマットした場合や8 GB以上のP2カードを本機にコピーした場合には、本機内蔵HDD内のパーティションがサブフォルダー"pa01"~"pa15"に順番にマウントされないことがあります。本機とパソコンを接続するときには、マウント処理を行うことをお勧めします。
- 7) 本機内蔵HDDのパーティション数が15 未満のときにマウント処理を行った後、 本機内蔵HDDをフォーマットして再度 接続したときには、確認のダイアログが 表示されるので、画面の指示に従ってく ださい。
- 8) 入力フォルダー名が存在しない場合には、 確認のダイアログが表示されるので、入 カフォルダー名を確認後[はい]をクリッ クしてください。
- 9) 本機とパソコンが接続されていないときに、マウント処理後のサブフォルダー "pa01" ~ "pa15"にアクセスすると、確認のダイアログが表示されることがあります。
- 10) [NTFSフォルダーへマウント]実行後に パソコンから本機を取り外す場合、取り 外し操作で表示される画面には、P2カ ード部に割り当てられたドライブレター 1 つのみが表示されます。
- 11) [NTFSフォルダーへマウント]実行後の サブフォルダー "paO1" ~ "pa15" のアイコン表示が異なることがありま す。ただし、データへのアクセスには問 題ありません。
- 12) [NTFSフォルダーへマウント]実行後の サブフォルダー "paO1" ~ "pa15" 内のデータをパソコンに複製する場合 は、"移動"ではなく "コピー"を行っ てください。

S.M.A.R.T情報ページ

ハードディスクは故障しやすいので、使用するまえに参考としてS.M.A.R.T (Self-Monitoring, Analysis and Reporting Technology) 情報を確認してください。 異常表示がある場合には、ご購入の販売店にご相談ください。

本機内蔵HDDの自己診断情報を確認できます。

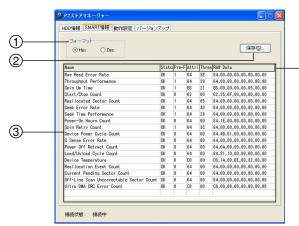

① フォーマット欄

自己診断情報の数値表示を、以下のように選択 できます。

16進表示にしたいとき: [Hex] を選択する10進表示にしたいとき: [Dec] を選択する

② 保存ボタン


自己診断情報を保存できます。

- 1.[保存] ボタンをクリックする [名前をつけて保存] ダイアログが表示されま す。
- 2.ファイル名を入力して [保存] ボタンをクリックする

自己診断情報がテキストファイルで保存されます。

③ 自己診断情報表示欄

自己診断情報を表示します。



a Name

表示されている項目の名称を表示します。

6 Status

診断結果を表示します。

OK: 異常なし NG: 異常あり

© Pre-Failure / Advisory

内蔵HDDの異常を、重要度"1"か"O"で表示します。

"l":重要度が高い "O":重要度が低い

重要度が"1"で **⑤**の診断結果が"NG"の場合、内蔵HDDに重大な異常が発生していますので、できるだけ早めに販売店にご相談ください。

Attribute

項目の状態を表す値を表示します。

Threshold

項目が、OKかNGかを判断する基準値を表示します。

- 動の状態値が、この欄の値以下になっている場合は、NGと判断されます。
- **f** RAW Data

項目の状態の詳細データを表示します。

動作設定ページ

本機の動作設定を確認/変更できます。



① 温度上昇時のHDD動作欄

本機内蔵HDDの温度が、所定温度の上限を超えた場合に、HDD動作を停止させるか、あるいは常に動作させるかを設定できます。

[停止させる] / [常に動作] から選択できます。

初期設定は [停止させる] です。

本機の現在の設定内容が、 "現在の設定: 欄に表示されます。

設定を変更する場合は、選択後、⑦の [適用] ボタンをクリックしてください。

ノート:

[常に動作] に設定するとHDDの故障要因になる可能性があります。お客様の責任においてご使用ください。

② HDD動作温度の下限欄

本機内蔵HDDの動作が可能な下限温度値を設定できます。

[5 ℃/41 F] / [-5 ℃/23 F] から選択できます。

初期設定は [5 ℃/41 F] です。

本機の現在の設定内容が、"現在の設定:"欄に表示されます。設定を変更する場合は、選択後、⑦の[適用]ボタンをクリックしてください。

ノート:

③ USBモードでの衝撃検知欄

本機とパソコンをUSB2.0対応ケーブルで接続しているとき、本機の衝撃検知を有効にするかどうかを[ON]/[OFF]で設定できます。

[ON](初期設定)

本機に衝撃が加わると、パソコンとのデータ転送を停止します。

[OFF]:

本機に衝撃が加わっても常にデータ転送を行います。

本機の現在の設定内容が、"現在の設定: "欄に表示されます。設定を変更する場合は、選択後、⑦の[適用]ボタンをクリックしてください。 ノート:

[OFF] 設定は [ON] 設定と比べてHDDが 故障する可能性が高くなります。 お客様の責任においてご使用ください。

④ 自動電源OFFまでの時間欄

本機がコピーおよびフォーマットなどの動作をしていない状態で放置された場合に、電源を自動的にOFFするまでの時間を設定できます。[OFFしない]/[5分]/[10分]/[15分]/[20分]/[25分]/[30分]から選択できます。初期設定は[10分]です。

本機の現在の設定内容が、"現在の設定: 欄に表示されます。

設定を変更する場合は、選択後、⑦の[適用] ボタンをクリックしてください。ただし、本機 とパソコンを接続しているときは、自動的に電 源はOFFしません。

⑤ 動作モード

本機と接続するパソコンの種類を設定します。 [Windows, Mac(PowerPC)]

接続パソコンがWindowsもしくはMac OS X コンピューター時に設定します。(工場出荷設 定状態。通常はこの状態でご使用ください。)

[Mac(Intel)-P2Card]

接続パソコンがIntelベースのMac OS Xコンピューター時に設定します。

設定すると、本機のP2カードのみに接続パソコンからアクセス可能となります。

[Mac(Intel)-HDD]

接続パソコンがIntelベースのMac OS Xコンピューター時に設定します。

設定すると、本機の内蔵HDDのみに接続パソコンからアクセス可能となります。

選択後、⑦の[適用]ボタンをクリックしてください。

ノート:

- PowerPCベースのMac OS Xコンピューターの場合は、この動作モードは表示されません。
- ●本機とMac OS Xコンピューターを接続するときは、必ず専用ドライバーがインストールされていることを確認してください。
- ●USBホスト機能を有するP2機器に接続して使用後、本機の動作モードを変更した場合、再度同じP2機器に接続して使用するときには、動作モードを変更前に戻すか、P2機器を再起動後、接続してください。

⑥ 初期状態に戻すボタン

①、②、③、④の選択状態を初期状態に戻すことができます。ただし、設定内容は変更されていません。

設定を変更する場合は、⑦の[適用] ボタンを クリックしてください。

⑦ 適用ボタン

①、②、③、④、⑤の動作設定内容を、本機に保存できます。


- 1. [適用] ボタンをクリックする 確認のダイアログが表示されます。
- 2.[はい] をクリックする 動作設定内容を本機に保存します。
- 3.本機を再起動する

ノート:

適用した設定は、本機を再起動した後に有効になります。

バージョンアップページ

本機のソフトウェアのバージョンアップを実行できます。

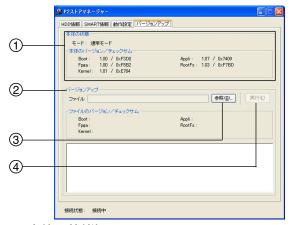

① 本体の状態欄

本機の現在の動作状態を示すモード(通常モード、バージョンアップモード)と実行中のソフトウェアのバージョンとチェックサムが表示されます。

② バージョンアップ欄

本機のソフトウェアのバージョンアップ処理が 実行できます。

③ 参照ボタン

[参照] ボタンをクリックし、ダウンロードした本機用のソフトウェアデータを選択できます。

"ファイルのバージョン/チェックサム"欄に、 バージョンアップ後のソフトウェアのバージョ ンチェックサムが表示されます。

④ 実行ボタン

本機のソフトウェアのバージョンアップが実行 できます。

バージョンアップ終了まで数分程度かかりま す。

ノート:

バージョンアップ実行中は、本機の電源をOFFしたり、USB2.0対応ケーブルを抜かないでください。

故障の原因になります。また、バージョンアップを実行するときは、本機を安定した場所に置いて実行してください。

バージョンアップ手順

下記のサポートサイトから画面の指示に従って本機用のソフトウェアデータをダウンロードして、任意のフォルダーに解凍する

日本語

http://panasonic.biz/sav/


英語

https://eww.pavc.panasonic.co.jp/pro-av/

2. 本機の電源をOFFする

接続状態表示領域に"接続状態: 切断"が表示されます。

3. 本機側面のスライドスイッチカバーを外し、下図のようにスライドスイッチをフロントパネル側に設定する

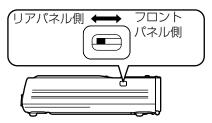

4. 本機の電源をONする

接続状態表示領域に"接続状態: 接続中"が表示されます。

5. "本体の状態"欄に "モード: バージョンアップモード"が表示されたことを確認する "モード: 通常モード"になっている場合には、手順3. のスライドスイッチがフロントパネル側になっているか、再度確認してください。バージョンアップモードのときには、以下のようにLED表示されます。

■ : 点灯□, ① : 点滅G : 緑色OR : 橙色

	COP	Y STA	TUS			
20	40	60	80	∐P2C	HDDO	
— G	— G	- G	— G	— G	■ OR	O OR

6. [参照] ボタンをクリックする

[ファイルを開く] ダイアログが表示されます。

7. 手順 1. でダウンロードした本機用のソフトウェアデータを選択する

"ファイルのバージョン/チェックサム"欄に、バージョンアップ後のソフトウェアのバージョンとチェックサムが表示されます。

"ファイルのバージョン/チェックサム"欄の内容と、"本体のバージョン/チェックサム"欄の内容が、同一の場合には、バージョンアップは必要ありません。手順11.へ進んでください。

8. **[実行] ボタンをクリックする** 確認のダイアログが表示されます。

9. [はい] ボタンをクリックする

バージョンアップが実行され、終了まで数分程度かかります。

バージョンアップ実行中は、USB2.0対応ケーブルを抜いたり、本機とパソコンの電源をOFFしないでください。

10. バージョンアップ完了のメッセージを確認し [OK] ボタンをクリックする

本機の電源が自動的にOFFします。

Windows2000の場合 [デバイス取り外しの 警告] が表示されますが問題ありませんので、 [OK] ボタンをクリックしてください。

- 11. 本機側面のスライドスイッチをリアパネル側に設定し、スライドスイッチカバーを付ける
- 12. 本機の電源をONする

接続状態表示領域に "接続状態: 接続中" が表示されます。

- 13. "本体の状態"欄が、"モード: 通常モード"表示になっていることを確認する
- 14. "ファイルのバージョン/チェックサム" 欄の内容と、"本体のバージョン/チェックサム" 欄の内容が、同一であることを確認する

同一でない場合は、手順2. から再度実行してください。

ノート:

P2カードについての最新情報および本機の動作確認情報は、下記のウェブサイトをご確認ください。

日本語

http://panasonic.biz/sav/

英語

https://eww.pavc.panasonic.co.jp/pro-av/

ERROR LED表示

本機で発生するエラーは、以下のように表示されます。 状況を確認して、対応内容に従ってください。

●, ■, ■: 点灯 ●, □, ■: 点滅 R: 赤色 OR: 橙色

	, I							
番号	ERROR			IAIN		 状 況	対応	
田石	ERROR	☐ E1	□ E2	□ E3	□ E4	1人 流 	רוון הצ	
1	●R						電源をOFFし、放熱させてから ご使用ください。	
2	• R	■R	∎R			内蔵HDDの温度が動作範囲外 である。	[E2] が点滅している場合はヒーターで暖機運転中です。 暖かい場所に移動してください。	
3	• R		■R			コピー開始時に、電圧が低下 している。		
4	●R		■R			コピー開始時に、バッテリー パック残量が不足している。	充電した別売のバッテリーパッ クか別売のACアダプターに切り	
5	●R	∎R	∎R	∎R	∎R	電圧が異常に低下している。	替えてください。	
6	• R			■R	∎R	コピー開始時に、内蔵HDDの 残量が不足している。	エラー表示解除後 ¹⁾ 、内蔵HDD をフォーマットしてください。 必要なデータがある場合には、フォ ーマットを行うまえに別の記録媒体 にバックアップをしてください。	
7	●R		■R	■R		コピー開始時に、P2カードが 挿入されていない。	エラー表示解除後 ¹⁾ 、P2カードを 挿入してコピーをしてください。	
8	• R			∎R	■R	コピー開始時に、振動が発生している。	エラー表示解除後 ¹⁾ 、安定した場所に置いてください。 振動停止後、使用できます。	
9	●R			■R	■R	コピー開始時に内蔵HDD残量 不足、P2カード未挿入、振動 などのエラー以外のエラーが 発生している。	エラー表示解除後 ¹⁾ 、再度コピーを行ってください。 再度エラーになる場合は、P2カードを交換してコピーを行って	
10						コピー時にエラーが発生して いる。 (P2カードを抜いた場合以外)	ください。 それでもエラーが発生する場合は、 ご購入の販売店にご相談ください。	
11	●R			■R		P2カードのフォーマットエラ ーが発生している。 (書き込み保護)	エラー表示解除後 ¹⁾ 、書き込み禁止スイッチをPROTECTの反対側に切り換えてください。 (ごJ-12ページ参照)	
12						修復が必要なクリップがP2カード内にある。	エラー表示解除後 ¹⁾ 、P2カメラ レコーダー等で修復してから、 ご使用ください。	
13	●R			■R		データのフォーマットが規格 外です。	エラー表示解除後"、再度フォーマットを行ってください。 それでもエラーが発生する場合は、 ご購入の販売店にご相談ください。	
14						使用できないP2カードが挿入 されている。	エラー表示解除後 ¹⁾ 、使用できます。P2カードについては、ご購入の販売店にご相談ください。	

¹⁾ エラー表示解除は、[POWER] ボタンと [CANCEL] ボタンを同時に押してください。

			REM	1AIN			
番号	ERROR	 E1	□ E2	□ E3	□ E4	状 況	対 応
15	●R			■R		P2カードのフォーマットエラーが発生している。(書き込み保護, P2カードを抜いた場合以外)	エラー表示解除後 ¹⁾ 、再度フォーマットを行ってください。 再度エラーになるときは、P2カードを交換してフォーマットを 行ってください。それでもエラーが発生する場合は、ご購入の 販売店にご相談ください。
16	● R		■R	■R		内蔵HDDの[クイックフォー マット]エラーが発生している。	内蔵HDDの異常が考えられま す。ご購入の販売店にご相談く
17	● R			∎R	■R	内蔵HDDの[全消去]エラー が発生している。	ださい。
18	●R		■R	■R		内蔵HDDのS.M.A.R.Tエラー が発生している。	内蔵HDDの異常が考えられます。必要なデータがある場合は、エラー表示解除後 ¹⁾ 、別の記録媒体にバックアップをして、ご購入の販売店にご相談ください。
19	● R				■R	前回コピー失敗で終了していて、そのあとに電源をONすると、エラーが発生する。	エラー表示解除後 ¹⁾ 、 再度コピ ーを行ってください。
20	● R				∎R	前回内蔵HDDの[クイックフォーマット]失敗で終了していて、そのあとに電源をONすると、エラーが発生する。	再度[クイックフォーマット]を実 行してください。
21	● R				■ OR	前回内蔵HDDの[全消去]失 敗で終了していて、そのあと に電源をONすると、エラー が発生する。	再度[全消去]を実行してくださ い。
22	• R	■R	■R	■R	∎R	本機内部エラーが発生し、コピーやフォーマットなどの操作ができない。	
23	• R	■R	■R	■R	■R	バージョンアップ時に、エラ ーが発生している。	本機の異常が考えられます。ご 購入の販売店にご相談ください。
24	• R	■ R			■R	補正がされていません。 本機内部の調整ができていな いため、エラーが発生する。	
25	• R		■ OR			内蔵リチウム電池が消耗して いる。	ご購入の販売店に連絡してリチウム電池を交換してください。 一旦表示されると、リチウム電池を交換しないかぎり、電源ON時に表示されます。
26	• R	■ R	■ R	■ R	∎R	内蔵HDDに管理情報を書き込み中に衝撃検知エラーが発生、 もしくはHDDアクセスエラー が発生している。	電源をOFFし、再度電源をONしてください。安定した場所に置いてコピーを行ってください。
27	• R		■ R	■ R	■R	内蔵HDDの管理情報に異常が 発生している。	必要なデータがある場合は、別の記録媒体にバックアップをして、[クイックフォーマット]を実行してください。

ERROR LED表示(つづき)

			REM	AIN				
番号	ERROR	□ 1	□ 2	□ 3 3	□ E4	状 況	対応	
28	• R			■ OR		単独Verify機能を実行したと き、Verify NGエラーが発生 している。	エラー表示解除後 ¹⁾ 、再度コピーを行ってください。	
29	• R			■ OR			エラー表示解除後 ¹⁾ 、再度コピー を行ってください。	
30					OR	内蔵HDDの衝撃検知エラーが 発生している。	衝撃が停止後、一定時間で消灯 します。	

1) エラー表示解除は、[POWER] ボタンと [CANCEL] ボタンを同時に押してください。

			COP	Y STA	TUS			
番号	ERROR	20	40	60	80	100%		対応
31	●R	OR	OR	OR	OR		P2カードアクセス中 に、P2カードを抜い てエラーが発生して いる。	

修理を依頼される前に

本機の動作がおかしいなと感じたら、一度以下の確認を行ってください。 それでも、異常状態が回復しない場合はご購入の販売店にご相談ください。

4 4 4 4	攻 認中交			
症状	確認内容			
「POWER」ボタン を押しても、POWER LEDが	• バッテリーパックが消耗していませんか?			
点灯しない。	• ACアダプターが正常に接続されていますか?			
P2カード挿入後、[START] ボタンを押してもコピーが開始されない。	内蔵HDDにコピーできる残量は残っていますか?内蔵HDDの所定温度以上あるいは以下のエラーが表示されていませんか?バッテリーパック残量が不足しているエラーが表示されていませんか?			
[□	• POWER LEDが緑色に点灯していますか?			
[HDD CAP] ボタンを押しても [REMAIN] が表示されない。	• POWER LEDが緑色に点灯していますか?			
本機とパソコンをUSB2.0対応ケーブルで接続しても、パソコンから本機内部のパーティション名がエクスプローラー(Windows)もしくはFinder(Macintosh)で見えない。	 本機がコピーおよびフォーマットの動作をしていませんか? パソコンはUSB2.0をサポートしていますか? パソコンのOSは以下の条件を満たしていますか? Windows Vista Business以上 Windows XP Professional SP2以降 Windows 2000 SP4以降 Macintosh OS X (10.4) 本機とパソコンを正しく接続していますか? パソコンのHDD/CD-ROMドライブの直後にネットワークドライブを割り当てていませんか? 			
P2カードのフォーマットができない。	書き込み禁止スイッチがPROTECT側になっていませんか?P2カードが正常に挿入されていますか?			
[POWER] ボタン を押しても、POWER LEDが 点滅状態のまま。	• 5 ℃以下で電源をONしていませんか?			

保証とアフターサービス(よくお読みください)

故障・修理・お取扱い

などのご相談は、まず、

お買い上げの販売店

へ、お申し付けください。

お買い上げの販売店がご不明の場合は、当社 (裏表紙) までご連絡ください。

※ 内容により、お近くの窓口をご紹介させていただく場合がございますのでご了承ください。

■ 保証書 (別添付)

お買い上げ日・販売店名などの記入を必ずお確かめの上、お買い上げの販売店からお受け取りください。

内容をよくお読み頂いた上、大切に保存してください。

万一、保証期間内に故障を生じた場合には、 保証書記載内容に基づき、「無料修理」さ せていただきます。

保証期間:お買い上げ日から本体1年間

■ 補修用性能部品の保有期間 6年

当社は、この"ポータブルハードディスクユニット"の補修用性能部品を、製造打ち切り後6年保有しています。

※ 補修用性能部品とは、その製品の機能 を維持するために必要な部品です。

■ 保守・点検

保守・点検は機器の機能を常に良好な状態に維持し、お客様が安心してご使用していただくためのものです。

部品の劣化、ごみ、ホコリの付着などにより 突発的な故障、トラブルを未然に防ぐととも に、安定した機能、性能の維持のために、定 期的な保守・点検を推奨いたします。

保守・点検 (有料) についての詳しい内容は、お買い上げの販売店にご相談ください。

修理を依頼されるとき

この取扱説明書を再度ご確認の上、お買い上げの販売店までご連絡ください。

◆ 保証期間中の修理は...

保証書の記載内容に従って、修理させていただきます。詳しくは保証書をご覧ください。

◆ 保証期間経過後の修理は...

修理により、機能、性能の回復が可能な場合は、ご希望により有料で修理させていただきます。

ご連絡いただきたい内容				
品名	ポータブルハードディスクユニット			
品番	AJ-PCS060G			
製造番号				
お買い上げ日				
故障の状況				

定格

電源 : DC7.9 V

消費電流:最大時 1.3 A 通常動作 0.8 A

は安全項目です。

動作電源電圧:

バッテリーパック DC7.2 V (別売品 VW-VBD33、VW-VBD55) ACアダプター DC7.9 V (別売品 AG-B25)

環境条件:

使用時 温度 0 ℃~+40 ℃1)

湿度 5 %RH~85 %RH

(結露なきこと)

保存時 温度 -20 ℃~+60 ℃

湿度 0 %RH~90 %RH

(結露なきこと)

1) HDD保護のため、内部温度が所定温度 以下もしくは以上になったときには、 エラー表示をして、コピー操作ができ ない状態になります。

PC動作条件:

動作保証OS

Windows Vista Business以上 Windows XP Professional SP2以降, Windows 2000 SP4以降

Macintosh OS X (10.5)

USBインターフェース USB Ver2.0準拠

HDD容量:

60 GB

PCカードスロット:

PCMCIA Type II (CardBus準拠) ×1

外形寸法(幅)×(高さ)×(奥行): 90 mm×45 mm×180.5 mm (突起部は含まず)

質量:

約650 g

1EMO

MEMO

Ħ	
Н	
н.	

MEMO		

Panasonic Corporation

Web Site: http://panasonic.net

Panasonic Broadcast & Television Systems Company

Unit Company of Panasonic Corporation of North America

Executive Office: One Panasonic Way 4E-7, Secaucus, NJ 07094 Tel: 201-348-7000 Eastern Zone: One Panasonic Way 4E-7, Secaucus, NJ 07094 Tel: 201-348-7196

Southeast Region: Tel: 201-392-6151 Western Zone: 3330 Cahuenga Blvd W., Los Angeles, CA 90068 Tel: 323-436-3608

Government Marketing Department:

One Panasonic Way 2E-10, Secaucus, NJ 07094 Tel: 201-348-7587

Broadcast PARTS INFORMATION & ORDERING:

9:00 a.m. - 5:00 p.m. (EST) Tel: 800-334-4881/24 Hr. Fax: 800-334-4880

Emergency after hour parts orders Tel: 800-334-4881

e-mail: PBTSparts@us.panasonic.com

TECHNICAL SUPPORT: Emergency 24 Hour Service Tel: 800-222-0741

e-mail: PBTSCservice@us.panasonic.com

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3 Tel: 905-624-5010

Panasonic de México S.A. De C.V.

Casa Matriz: Moras No.313 Col. Tlacoquemecatl Del Valle Del.Benito Juárez México, D.F., C.P.03200 Tel: 55-5488-1000 Fax: 55-5575-6783

Panasonic Latin America, S.A.

P.O.Box 0816-03164 Panama, Republic of Panama Tel: +507-229-2955 Fax: 507-229-5352

Panasonic do Brasil Ltda.

Rua Cubatão, 320-6º andar-Paraíso CEP 04013-001- São Paulo -SP Tel: 11-3889-4000 Fax: 11-3889-4004

Professional & Broadcast IT Systems Business Unit Europe

Panasonic AVC Systems Europe a Division of Panasonic Marketing Europe GmbH

Hagenauer Str. 43, 65203 Wiesbaden-Biebrich Deutschland Tel: +49-611-235-481

Panasonic Systems Asia Pacific (Broadcast Regional Operation Center)

2 Jalan Kilang Barat, Panasonic Building, Singapore 159346 Tel: +65-6270-0110

파나소닉 코리아 주식회사 (PKL)

서울특별시 서초구 서초동 1718-9 서현 BLDG 서비스 문의: 02-533-8452 http://panasonic.kr

パナソニック株式会社 AVCネットワークス社 システム事業グループ

